

xiaomi Microwave Oven User Manual



Read this manual carefully before use, and retain it for future reference.

Precautions:

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNINGS:

- This product is intended for household use only.
- Do not use the microwave oven for food storage or for purposes other than cooking.
- Use appropriate utensils inside the microwave oven, as specified in the "microwave oven utensil selection" section in the manual. Ensure that the utensils do not touch the interior walls of the cavity.
- Do not use metal utensils, including those with gold or silver trims, as they may damage the microwave oven or pose a safety risk.
- Do not use any accessories that are not recommended by the manufacturer.
- Do not operate the microwave oven when it is empty, as this may damage the microwave oven or pose a safety risk.
- Do not use a steam cleaner to clean the microwave oven.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety for IEC 60335.

- Children should be supervised to ensure that they do not play with the appliance for IEC 60335.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision for EN60335.
- Use the microwave oven on a flat surface in a ventilated, dry, and non-corrosive environment, away from high temperatures and steam.
- Do not place any objects on top of the microwave oven. To ensure adequate air circulation, place the microwave oven at least 85 cm above the floor, at least 5 cm on each side from the walls, at least 10 cm from the back wall, and at least 20 cm from the overhead cabinet.
- Keep the microwave oven more than 5 m away from televisions, radios, and antennas to avoid interference.
- Place the microwave oven where the power cord can be easily connected and disconnected, and ensure proper grounding so that in case of electrical leakage, the grounding wire can create a current loop to prevent electric shocks.
- Ensure that the microwave oven is operated with the oven door closed.
- Do not use the microwave oven inside a cabinet.
- Do not insert pins, wires, or other objects into any of the openings of the microwave oven to avoid electric shocks or injury.
- Do not insert any foreign object into the oven door interlock switch, as this may lead to microwave leakage.
- When heating food in plastic or paper containers, keep an eye on the microwave oven due to the possibility of ignition.
- Do not heat foods with high oil or fat content, as the temperature of the oil can become very high and lead to situations beyond control.

- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- When heating liquid foods, use wide-mouth containers and leave enough space between the food and the container's rim to prevent boiling over.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- Before heating round-shaped foods like potatoes, chestnuts, and sausages, pierce them with a knife or fork to prevent bursting or splattering.
- Eggs in their shell and whole hard-boiled eggs should not be heated in the microwave oven since they may explode, even after microwave heating has ended.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Connect the microwave oven to a dedicated power outlet.

Precautions for Electrical Safety

- Use only the provided AC power cord.
- Unplug the AC power cord from the outlet before performing any maintenance or moving the microwave oven.
- If the power cord is damaged or broken, it must be replaced by professionals from the manufacturer, after-sales service department, or departments of similar functions to avoid safety hazards.
- Do not excessively bend, pull, or twist the AC power cord, as this may expose the core or cause it to break.
- Do not use the provided AC power cord on any other devices.

- Do not use a power supply other than 220 V AC to 230 V AC to avoid fire or electric shocks.
- When disconnecting the AC power cord, hold the power plug to unplug it. Do not pull the AC power cord to prevent electric shocks or short-circuit fire.
- Do not allow children to operate the microwave oven alone. Keep it out of reach of infants and young children to prevent accidents such as electric shocks or burns.
- Do not plug or unplug the power plug with wet hands to avoid electric shocks or injury.
- Do not use AC power outlets that do not meet the specifications requirements.
- Do not use multi-plug outlets to prevent fire hazards.
- To comply with the EN 61000-3-11 standard, the microwave oven can only be connected to a system with a power supply impedance of $\frac{1}{2}Z_{sys}\frac{1}{2} = 0.297$ ohms or less. Before connecting the microwave oven to the public power grid, consult the local power supply department to ensure that the power grid meets the requirements mentioned above.

During Use

- When using the microwave oven for the first time, there might be residues or grease from the manufacturing process inside the cavity. Therefore, heating may result in an odor or even produce white smoke, which is normal. Please refer to the cleaning and maintenance instructions to deodorize the microwave oven.
- Do not place flammable or combustible materials near the microwave oven. Always monitor the cooking process and set the cooking time correctly while the microwave oven is in operation, as overcooking might cause fire hazards.
- Do not remove the mica plate inside the microwave oven to ensure normal operation.

- The surface temperature of the microwave oven may be high during operation, so do not touch it to prevent burns.
- Be cautious of microwave radiation. Do not place any objects near the ventilation openings of the microwave oven during operation, as this may affect proper heat dissipation.
- Do not place a thermometer inside the microwave oven to measure temperature.

After Use

- After each use, first wipe away any food or grease splatters inside the oven with a damp cloth and then with a dry cloth to prevent black smoke or fire.
- When removing cooked food or taking out dishes, wear gloves to prevent burns, as the interior temperature is high.
- Exercise caution when opening popcorn bags or removing plastic wrap from containers after popping popcorn to avoid burns.
- After extended microwave use, do not immediately start defrosting. Wait until the bottom tray cools down before defrosting.

Cleaning & Maintenance







- Regularly clean the microwave oven and remove all food residue from its interior.
- Pay attention to cleaning the door seals, cavity, and adjacent parts in detail.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- When wiping the glass tray with a damp cloth, wait until it cools down.
- Do not place hot food or containers on the cooled glass tray.
- Do not place cold food or containers on the hot glass tray.

About the Environment



- Steam and heat may damage, discolor or deform your walls and furniture, keep the microwave oven at least 30 cm away from them during use.
- When planning to place the microwave oven in kitchen cabinets or similar locations, ensure proper ventilation.

Microwave Oven Utensil Selection

Only use suitable utensils inside the microwave oven and do not heat liquids or other foods in sealed containers, as this could result in explosions. Before heating, open the food packaging and transfer the contents to microwave-safe utensils.

Utensils	Illustration	Microwave cooking	Remark
Heat-resistant microwavable ceramic utensils		✓	Ceramic pots, casseroles, etc. labeled as "microwave safe" can be used in the microwave oven. However, containers with gold or silver decorations, or colored glaze should not be used in the microwave oven.
Heat-resistant microwavable glass utensils		✓	Glass utensils, such as food storage containers, can be used in the microwave oven.
High-temperature resistant cling film		✓	High-temperature resistant cling film can be used to wrap vegetables to prevent moisture loss, but should not be used directly to wrap meat or fried foods.
Metal utensils		✗	Metal utensils should not be used in the microwave oven.
Microwave steamer Microwave rice steamer		✓	Before use, ensure that there is enough water in the steamer or rice steamer base. Do not dry heat without water.
Heat-resistant microwavable plastic utensils		✓	Use containers labeled as "microwave safe".

Product Overview

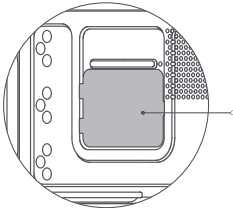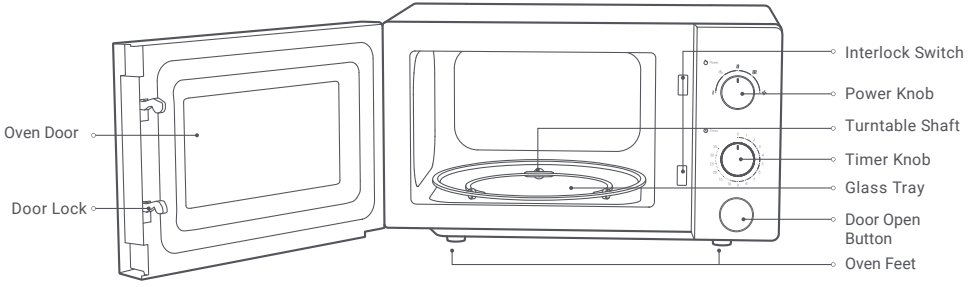


Mica Plate
Do not remove the mica plate to prevent water or grease from entering the waveguide while the microwave oven is operating, which could be hazardous.

Accessory List



Glass Tray × 1

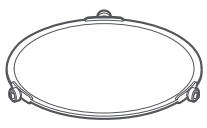


Turntable Shaft × 1

Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Usage of Accessories

The microwave oven comes with accessories including a glass tray and a turntable shaft. Before use, place the turntable shaft on the bottom track of the cavity, and then place the glass tray on the turntable shaft. Ensure that the turntable shaft, bottom track, and glass tray fit securely.

How to Use

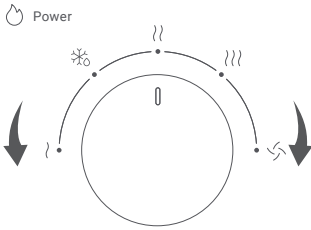


Power control

Icon	Power level	Microwave output ratio
	Low	17% microwave output
⚡	Defrost	30% microwave output
}}}	Medium	55% microwave output
}}}	Medium-high	80% microwave output
⚡	High	100% microwave output

Defrosting time table based on weight

Weight	Defrosting time	Weight	Defrosting time	Weight	Defrosting time
200 g	Approx. 4 min	400 g	Approx. 8 min	600 g	Approx. 12 min

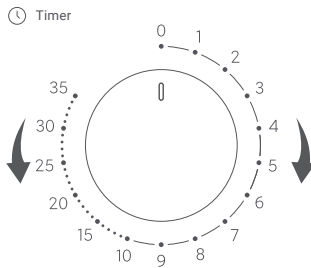

Timer settings

Rotate the knob left or right to adjust the microwave time. The maximum time should not exceed 35 minutes. When the timer knob is set to the "0" position, the microwave oven beeps and stops heating.

Operation steps

1. Connect the microwave oven to the power supply.
2. Place food on the glass tray and close the oven door.
3. Select a power level for microwave cooking.
4. Set the cooking time. If the set time is less than 2 minutes, turn the timer knob to approximately the 3 minutes position, and then turn it back to your desired time position.
5. The microwave oven program starts running. During operation, if you open the door, the microwave oven immediately stops running. It continues running when the door is closed.
6. After cooking is completed, the microwave oven beeps and stops heating, and the oven light goes off. If you take out the food in advance, please manually turn the timer knob back to the "0" position to prevent the microwave oven from running empty.
7. When taking out or flipping food, it is strongly recommended to wear gloves and be careful not to touch the interior walls of the oven.

Notes: During operation, do not place any objects near the ventilation openings of the microwave oven to ensure proper heat dissipation. Do not operate the microwave oven empty, as this may cause damage to the microwave oven.



- Generally, the microwave oven can heat food quickly within 2 to 3 minutes. Do not heat for more than 5 minutes. Keep an eye on the cooking progress of the food and adjust the time according to your personal taste preference to prevent overheating.
- When heating congee or porridge, stir it well and then cover it with plastic wrap (leaving edges open for ventilation) or a lid with holes.
- When halfway through defrosting, open the oven door and flip the food to ensure a more even defrosting.

Care & Maintenance

- Regular cleaning and maintenance of the microwave oven can help extend its service life.
- After using the microwave oven, promptly unplug the power plug. Do not place the microwave oven near the fire source or immerse it in water. Do not place the power cord and plug directly on top of the casing to prevent damage from residual heat.
- The microwave oven should be cleaned and maintained after it cools down.
- Do not use abrasive cleaning materials or detergents.

Microwave oven surface:

Dampen a soft cloth in warm water and apply an appropriate amount of detergent to wipe the surface of the microwave oven.

Oven door:

Wipe the door, sides, seals, and adjacent parts clean with a soft cloth dampened with warm water.

Control panel:

Take care when cleaning the panel. Wipe it gently with a soft cloth slightly dampened with water.

Oven cavity:

After each use, use a soft cloth dampened with warm water to clean the interior of the oven cavity and the glass-ceramic plate, and remove food residues that could cause localized overheating.

After a period of use, there might be lingering odors in the cavity of the microwave oven.

You can use the following three methods to eliminate them:

1. Place a few lemon slices in a cup in the microwave oven and heat on high power for 2-3 minutes.
2. Place a glass of black tea in the microwave oven and heat on high power for 2-3 minutes.
3. Place some orange peels in the microwave oven and heat on high power for 1 minute.

Specifications

Name	Microwave oven	Model	MWB010-2A
Rated Voltage	220-230 V~	Rated Input Power	1100 W
Rated Capacity	20 L	Rated Microwave Frequency	2450 MHz
Rated Frequency	50 Hz	Item Dimensions	456 × 343 × 264 mm



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.



We, Chunmi Technology (Shanghai) Co., Ltd., hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.mi.com/global/service/support/declaration.html>

For detailed e-manual, please go to www.mi.com/global/service/userguide

Importer:

Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

www.beryko.cz

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Chunmi Technology (Shanghai) Co., Ltd.
a(Mi Ecosystem company)

Address: Building 11, 1333 Jiangnan Avenue, Changxing Science and Technology Park, Lingang, 201203 Shanghai, PEOPLE'S REPUBLIC OF CHINA

Made in China

For further information, please go to www.mi.com

User Manual Version: V1.0