

# **xiaomi** Electric Scooter 4 Lite (2nd Gen) User Manual



## Safety Reminder

### Battery and Charging Precautions


- Do not charge if the charging port, power adapter, or power outlet is wet. Read the user manual carefully before charging.
- Before charging, turn off the scooter or make sure it is not running.
- Do not use any third-party battery or power adapter.
- Charge at a temperature between 0°C and 45°C. Failure to properly charge the scooter within the specified temperature range could damage the battery.
- Do not dismantle, repair, or modify the battery on your own, as it contains hazardous substances.
- If you are not planning to use the scooter for an extended period, turn it off, fully charge it, and store it in a cool, dry place. To prevent damage from over-discharging, charge your scooter at least once every two months.


### Environmental Notice

The scooter contains a rechargeable lithium-ion battery pack, which will cause harm to the environment when being discarded. To properly dispose of the scooter, follow the instructions below and ask a professional to remove the battery pack from the scooter:


1. Make sure to use up the battery before removing it. Disconnect the scooter from power, and then unscrew and remove the bottom cover.
2. Unplug the battery connector to remove it. Do not damage the battery case to avoid injury.
3. Take the removed battery to the professional recycling facility to properly dispose of it.

### Do not Try Dangerous Actions

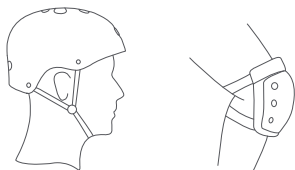


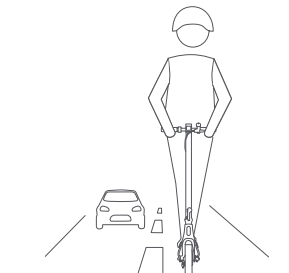
-  Wear a helmet, elbow pads and knee pads before riding.




-  Do not ride with anyone else, including children.




-  Do not hang bags or other heavy stuff on the handlebar.




-  Unless otherwise authorized by the local laws, it is forbidden and illegal to ride on public roads, motorways, and expressways.




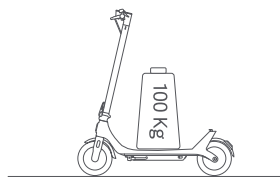
-  Do not ride the scooter with one or both hands off the handlebar, or with only one foot.




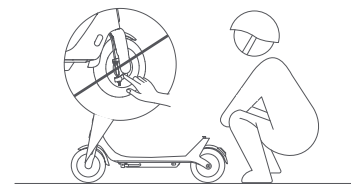
-  Do not use mobile phone or wear earphones when operating the scooter.




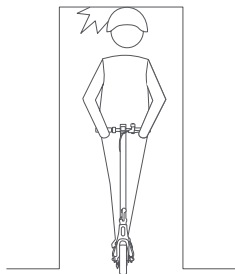
 When riding on uneven roads or in other poor road conditions, make sure to slow down as you ride over it or get off and walk with the scooter. To reduce the risk of accidents, ride your scooter on smooth surfaces that are free of potholes.




 Do not exceed the scooter's specified maximum payload (100 kg).




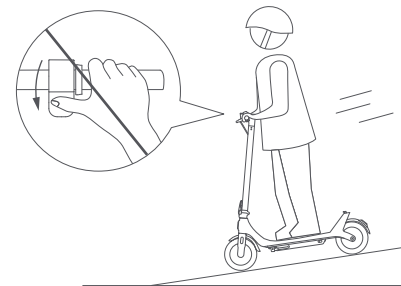
 Do not touch the mechanical brake.




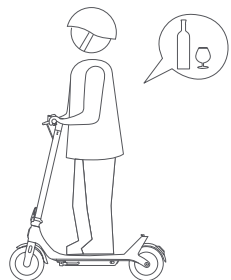
 Avoid hitting your head on door frames, elevators, and other overhead obstacles.




 Do not ride in the rain. Do not ride through puddles or any other (water) obstacles.




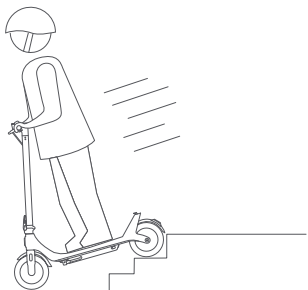
 Do not accelerate when going downhill, and brake in time to slow down. When on a steep slope, you need to step off the scooter and push.




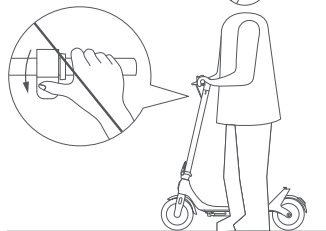
 Do not drink and drive. Riding a scooter while under the influence of alcohol or other substances is strictly prohibited.




 Do not keep your feet on the rear mudguard.




 Do not try riding up or down stairs, nor try jumping over obstacles.



 Do not press the accelerator when you are walking alongside the scooter.

## Package Contents

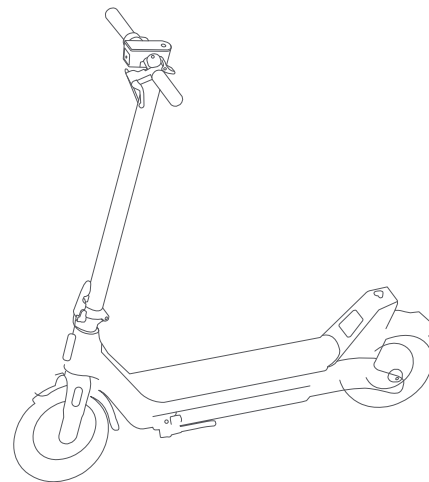

Electric Scooter



User Manual



Important Information



Specifications



Unpairing Instructions



Theoretical mileage tag


## Accessories



 
Extension Nozzle  
(Connect the pump to the valve for easy pumping)



Allen Key




Screw x 7

 

Battery Charger


Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.


## Product Overview

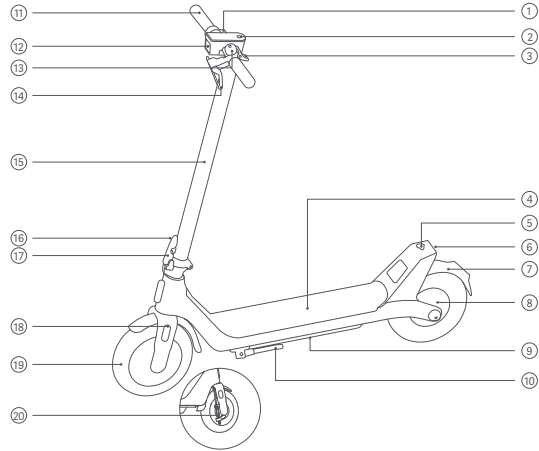


- |                                |                              |                    |
|--------------------------------|------------------------------|--------------------|
| ① Accelerator                  | ⑩ Kickstand                  | ⑲ Front Wheel      |
| ② Control Panel & Power Button | ⑪ Handlebar                  | ⑳ Mechanical Brake |
| ③ Buckle                       | ⑫ Headlight                  |                    |
| ④ Deck                         | ⑬ Scooter Bell               |                    |
| ⑤ Hook                         | ⑭ Brake Lever                |                    |
| ⑥ Taillight                    | ⑮ Stem                       |                    |
| ⑦ Rear Mudguard                | ⑯ Quick Release Lever Levier |                    |
| ⑧ Wheel Motor                  | ⑰ Quick Release Lever Lock   |                    |
| ⑨ Battery Compartment          | ⑱ Front Fork                 |                    |

## Control Panel & Power Button

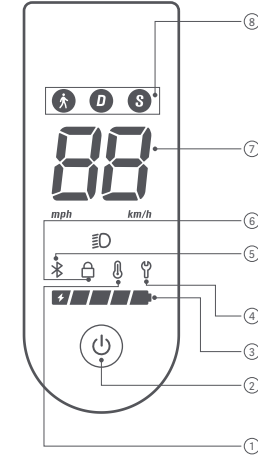


- ① Temperature Warning: If the battery temperature is too high or too low, the thermometer icon will be on. This will result in reduced acceleration and possibly charging issues. Use or charge the scooter after its battery temperature returns to the normal operating range.
- ② Power Button: Press the button to turn the scooter on, and hold the button for 2 to 3 seconds to turn the scooter off. When the scooter is on, press the button to turn on/off the headlight and taillight, and press twice to cycle through the riding modes.
- ③ Battery Level: The battery power is indicated by 5 bars, each representing approximately 20% of a full battery.
- ④ Error Notification: When the wrench icon displays red, it indicates that the scooter has an error.
- ⑤ Bluetooth: When the scooter is successfully connected to a mobile device, the Bluetooth icon will light up, and the maximum speed will be unlocked.
- ⑥ Lock: The lock icon will remain on when the scooter is locked and go out when the scooter is unlocked.
- ⑦ Speedometer: It displays the current speed when the scooter is working. When the scooter has an issue, it displays an error code. When the scooter is charging, it displays the current battery level.
- ⑧ Riding Mode:  is for walking mode, and its maximum speed is about 6 km/h; the taillight will blink when this mode is enabled. D is for standard mode, and its maximum speed is about 15 km/h. S is for sport mode, and its maximum speed is about 25 km/h. The scooter has high speed in S mode, and it is recommended to use it after mastering the riding skills.



## Assembly and Set-up

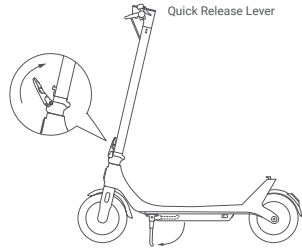

1. Put down the kickstand, and hold up the stem until it is completely in an upright position. Then lift the quick release lever lock, and push the quick release lever inward to the end.

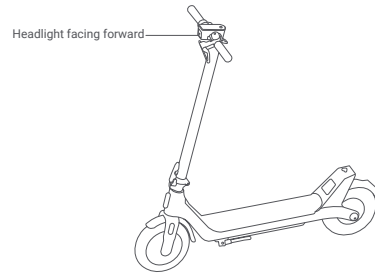

2. Insert the handlebar onto the stem. Make sure to install the handlebar facing the correct direction.

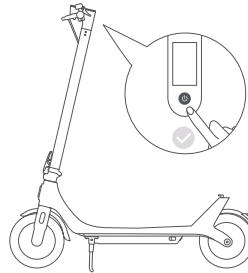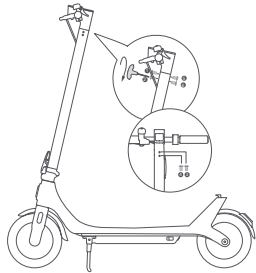


## Charge Your Scooter


The scooter is fully charged when the LED on the battery charger changes from red (charging) to green (fully charged).

Notes:


- Do not charge the scooter if the charging port, power adapter, or power outlet is wet.
- When the scooter is not being charged or after the charging is complete, make sure the rubber flap is inserted tightly into the charging port to prevent water from getting in.

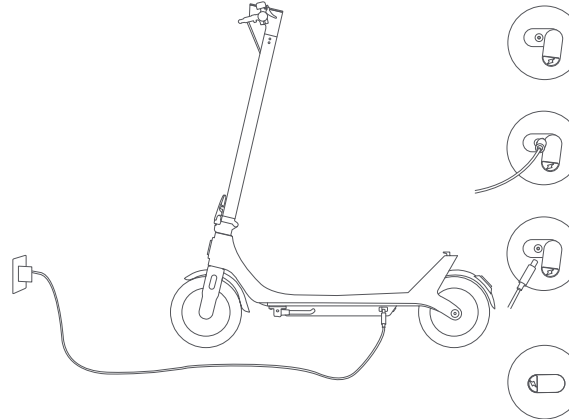


## Connect with Mi Home

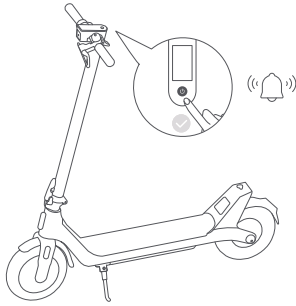


1. Before being activated, the scooter will keep beeping when turned on and is limited to 10 km/h. When the scooter is used for the first time, it must be activated via the Mi Home/Xiaomi Home app.

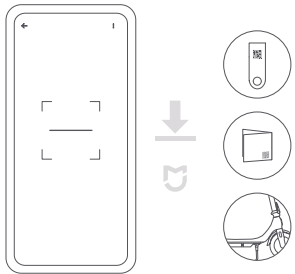



2. Scan the QR code on the label attached to the control panel, on the right side of the deck, or on the back cover of the user manual to download the Mi Home/Xiaomi Home app.

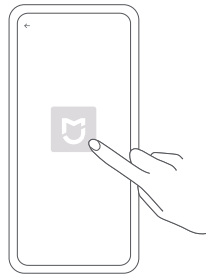

3. Open the Mi Home/Xiaomi Home app.

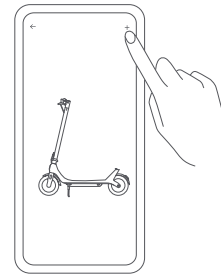

4. Tap "+" on the top right corner and open "Scan" to scan the QR code on the label attached to the control panel, on the right side of the deck, or on the back cover of the user manual again. Then follow the instructions in the app to add the scooter.

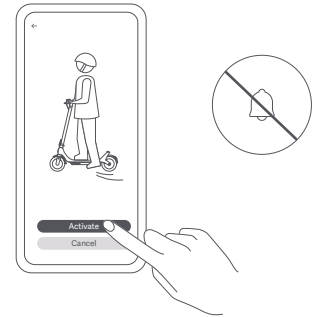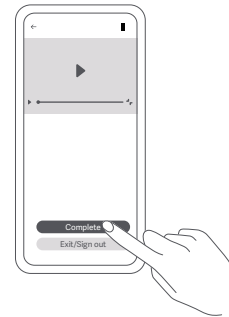

5. Watch the riding guide video. Do not exit the video before finishing it. Otherwise, the activation will fail.

### Notes:

- Open the Mi Home/Xiaomi Home app to use various functions, such as one-tap locking, energy recovery, and one-tap turning-on of the taillight.
- The version of the app might have been updated, please follow the instructions based on the current app version.

### Bluetooth resetting

Make sure the scooter is turned on. Press and hold the accelerator to the end, and simultaneously press the power button on the control panel 5 times in succession. When the Bluetooth is successfully reset, the scooter will make a buzz and the Bluetooth icon will blink.


### Restore factory settings

Make sure the scooter is turned on. Squeeze the brake lever, and simultaneously press and hold the accelerator and the power button for 7 seconds. When you hear a buzz, the scooter's Bluetooth has been unpaired and the scooter has been restored to factory settings. Then the control panel will return to its factory display and the Bluetooth icon will blink.

Note: The scooter cannot be restored to factory settings during riding or when locked.

## How to Ride


---

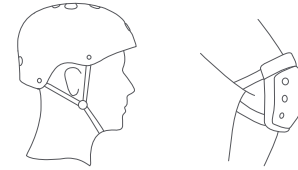


1. Wear a helmet, elbow pads and knee pads before riding  
Note: Check the tire pressure before riding. The recommended tire pressure is 45–50 psi.



2. Step on the deck with one foot, and slowly kicks off the other on the ground.

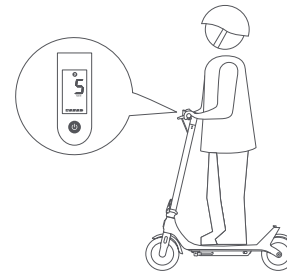


3. When the scooter starts to coast, put both feet on the deck and gently press the accelerator. The accelerator can be used once the scooter is going over 5 km/h.

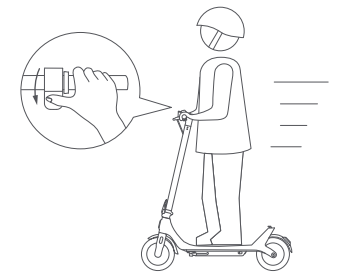


4. Gently press the accelerator to speed up and make sure not to go too fast.



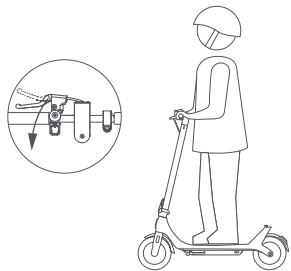

5. Slowly release the accelerator or press the brake lever to slow down.


⚠ Pay attention to the road conditions when riding and make sure to maintain an appropriate speed without sudden braking. Otherwise, the tires may lose grip and cause you to fall, resulting in serious injury.

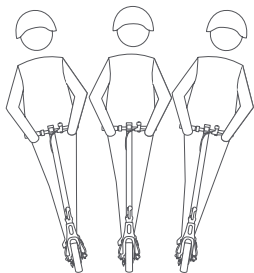

6. Tilt your body to the steering direction as you turn, and slowly turn the handlebar.



7. When the scooter slows down or stops, put one foot on the ground to get off the scooter.

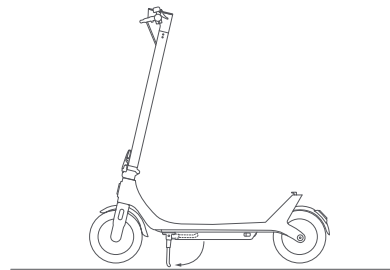


8. Put down the kickstand when parking the scooter.


⚠ To avoid others using the scooter without your permission, you can lock the scooter when it is parked.

## Lock/Unlock Your Scooter

Tap to lock

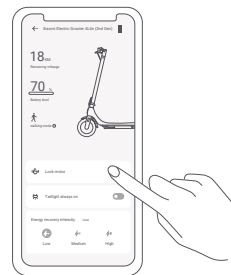

Tap to Unlock

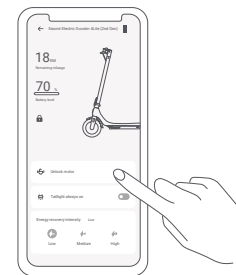


When the scooter is locked, the motor is locked and all the icons on the control panel will automatically go out except the Bluetooth icon and the lock icon. If the scooter goes beyond the Bluetooth connection range, the Bluetooth will be disconnected and its icon will go out.


If the scooter is locked, the motor will be locked. When you push the scooter forward, it will have a rolling resistance accompanied by the buzzer alarm. The scooter will automatically turn off after 24 hours of being locked, and remain locked when turned on again. You need to unlock the scooter via the Mi Home/Xiaomi Home app. Locking the scooter will consume the scooter's power, please use this function properly.

## Fold/Unfold & Carry


### Folding

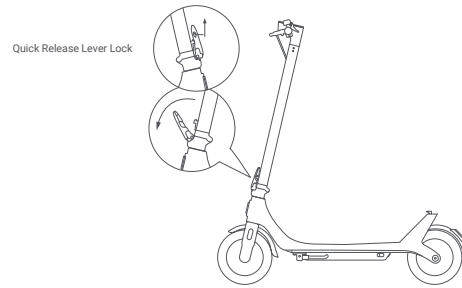

1. Make sure the scooter is turned off and not being charged before folding. Hold the stem, lift the quick release lever lock, and pull the quick release lever outward.


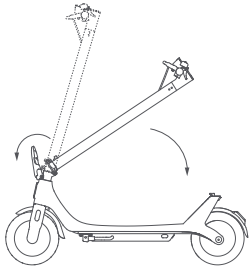


2. Lift the quick release lever lock again, and pull the quick release lever outwards to pop the bottom folding hook out. Then fold the stem.

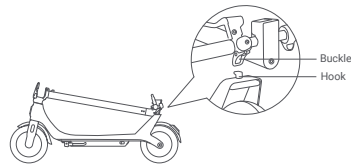


3. Align the buckle with the hook and secure them together.

### Carrying

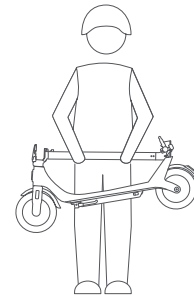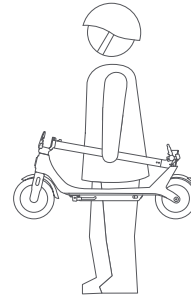


Hold the stem with either one hand or both hands to carry.

### Unfolding

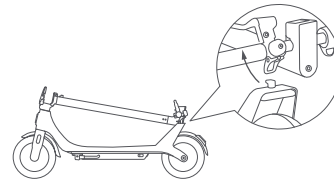


1. When unfolding the scooter, pull the buckle upwards to release it from the hook.

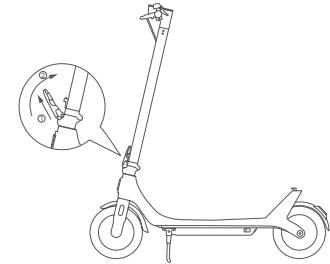


2. Hold up the stem in an upright position, and make sure the folding hook is attached to the stem. Lift the quick release lever lock as indicated by ①, and then push the quick release lever inward to the end as indicated by ②.


## Unfolding

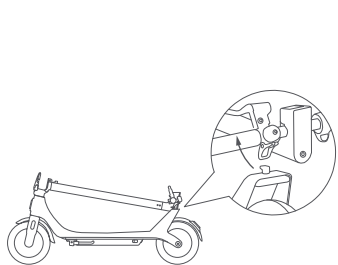


1. When unfolding the scooter, pull the buckle upwards to release it from the hook.

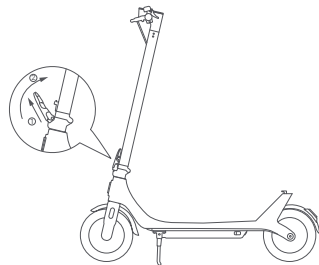

2. Hold up the stem in an upright position, and make sure the folding hook is attached to the stem. Lift the quick release lever lock as indicated by ①, and then push the quick release lever inward to the end as indicated by ②.

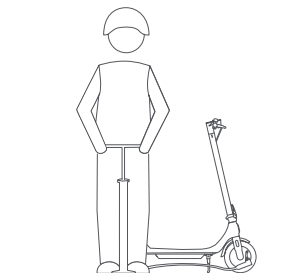

3. Inflate the tire.

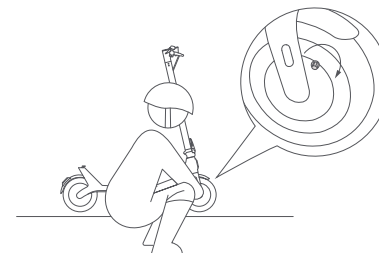


4. Tighten the tire valve cap securely after inflating the tires.


### Notes:

- Check the tire pressure every month, and inflate the tires if the pressure is too low. The recommended tire pressure is 45–50 psi.
- Removing tires is complex and should be operated by a professional, and incorrect operation could lead to instability of the scooter or other issues.

## Inflate the Tire

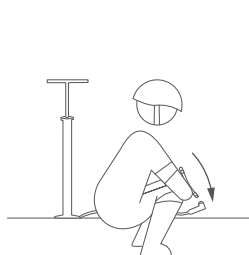


1. Connect the pump to the extension nozzle.

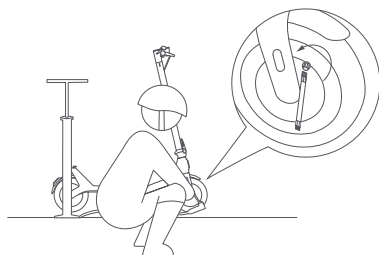

2. Remove the tire valve cap, and connect the extension nozzle and the valve securely together.

## Adjust the Mechanical Brake

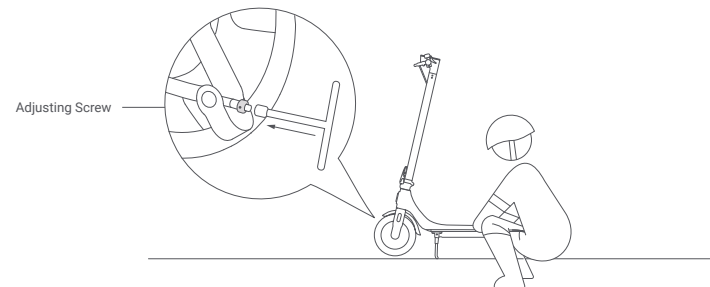

Before adjustment, make sure the scooter is powered off and not charging.

Tool: 14 mm T-handle socket wrench (the tool needs to be prepared by the user).

When the brake is too tight, use the tool to turn the nut on the screw rod counterclockwise, so as to slightly shorten the brake cable's exposed bottom part. When the brake is too loose, use the tool to turn the nut on the screw rod clockwise, so as to slightly lengthen the brake cable's exposed bottom part.

## Warranty Notice

---

As a Xiaomi consumer, you benefit under certain conditions from additional warranties. Xiaomi offers specific consumer warranty benefits which are in addition to, and not instead of, any legal warranties provided by your national consumer law. The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website <https://www.mi.com/global/support/warranty>. Except as prohibited by laws or otherwise promised by Xiaomi, the after-sales services shall be limited to the country or region of the original purchase. Under the consumer warranty, to the fullest extent permitted by law, Xiaomi will, at its discretion, repair, replace or refund your product. Normal wear and tear, force majeure, abuse or damage caused by the user's negligence or fault are not warranted. The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person as Xiaomi may identify.

The present warranties do not apply in Hong Kong and Taiwan.

Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product.

## Disclaimer

---

The user materials are published by Xiaomi or its local affiliated company. Improvements and changes to the materials necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Xiaomi at any time and without notice. Such changes will, however, be incorporated into new online editions of the user materials (please see details at [www.mi.com/global/service/userguide](http://www.mi.com/global/service/userguide)). All illustrations are for illustration purposes only and may not accurately depict the actual device.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements. For further information, please go to [www.mi.com](http://www.mi.com)

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Shenzhen LEQI Intelligent Technology Co., Ltd.

(a Mi Ecosystem company)

Address: Room 215, Block D, Colorful Science and Technology Park, No.5 Guanle Road, Luhu Community, Guanhu Street, Longhua District, Shenzhen, Guangdong, P.R. China Made in China

Importer:

Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

[www.beryko.cz](http://www.beryko.cz)