





Address: Room 2112-1-1, South District, Finance and Trade Center, No.6975
Yazhou Road, Dongjiang Bonded Port Area, Tianjin Pilot Free Trade
Zone, Tianjin, China

For further information, please go to www.mi.com

Importer: Beryko s.r.o. Na Roudné 1162/76, 301 00 Plzeň www.beryko.cz

Mop Pad Replacement Instructions


- 1. Remove the mop pad from the water tank.
- 2. Dampen the new mop pad and wring out excess water, then attach it securely to the bottom of the water tank.



Note: A worn or damaged mop pad that no longer sticks to the water tank should be replaced to ensure optimal cleaning performance.

Filter Replacement Instructions

- 1. Use your fingers to slide out old water dispenser filters on the left and right sides of each slot.
- 2. Insert the new water dispenser filters and check to ensure they are installed correctly.

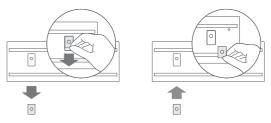

Note: To ensure optimal mopping effectiveness, it is recommended to replace water dispenser filters once every 3 to 6 months depending on water quality and frequency of use.