

xiaomi Vacuum Cleaner G9 Plus User Manual



Safety Instructions

This product is for household use only. Read this manual carefully before use, and retain it for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Do not use the product at an ambient temperature above 38°C or below 5°C or on a floor with liquids or sticky substances. If the charger or battery pack is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

To reduce the risk of fire, explosion, or personal injury, check to make sure the lithium-ion battery and charger are undamaged before use. Do not use the vacuum cleaner if either the battery or charger is damaged.

Only use the vacuum cleaner on dry indoor surfaces. Do not install, charge, or use this product outdoors, such as in bathrooms, or near a pool.

Do not touch the plug or any part of the vacuum cleaner with wet hands.

The high torque brush bar, mini electric brush, battery, extension rod, and the vacuum cleaner are electrically conductive and should not be immersed in water or other liquid. Make sure all parts are thoroughly dry after you carry out cleaning on them.

To prevent injury caused by moving parts, turn off the vacuum cleaner before cleaning the high torque brush bar and mini electric brush. The high torque brush bar, dust compartment, and filter must all be properly installed before using the vacuum cleaner.

Do not use the vacuum cleaner to pick up flammable or combustible liquids, such as gasoline, bleach, ammonia, or drain cleaners; nor other liquids like water.

Do not use the vacuum cleaner to pick up drywall particles, ashes like fireplace ash, or smoking or burning materials such as coal, cigarette butts or matches.

Do not use the vacuum cleaner to pick up sharp or hard objects, such as glass, nails, screws, or coins, which may damage the product.

Keep hair, loose clothing, fingers, and other parts of the body away from the vacuum cleaner's openings and moving parts. Do not point the suction opening, extension rod, or other accessories at your eyes or ears or put them in your mouth.

Do not put any object into the vacuum cleaner's openings, nor use the vacuum cleaner with any opening blocked. Keep free of dust, lint, hair, or other items which may reduce airflow.

Do not rest the vacuum cleaner against a chair, table, or other unstable surfaces, as this may cause damage to the product or personal injury. If the vacuum cleaner malfunctions because of being knocked over or damaged, please contact the authorized service department. Never attempt to disassemble the vacuum cleaner on your own.

The dust compartment cover, pre-filter, cyclone assembly, and filter must all be properly installed prior to using the vacuum cleaner. Make sure the charger is unplugged when not used for extended periods as well as prior to performing any maintenance or repairs.

Please be extra careful when using the vacuum cleaner to clean stairs.

Fire Hazard Warning: Do not apply any type of fragrance to the vacuum cleaner's filter. These types of products are known to contain flammable chemicals which may cause the vacuum cleaner to catch fire.

DO NOT expose the battery and appliance to fire as it may cause explosion.

DO NOT expose or submerge the battery and appliance in any water, salt water, or other liquids.

WARNING: Do not use any third-party battery pack and charger.


Use only with BLJ24W308080P-V charger.

Use only with V2209-7S1P-BCA battery pack.


Please strictly follow the instructions in this user manual when using the vacuum cleaner. Users are responsible for any loss or damage that may arise from improper use of the vacuum cleaner.

Product Overview


Accessories List

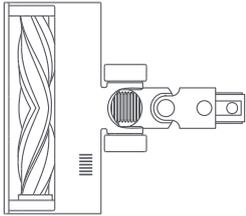

High Torque Brush Bar

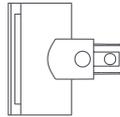

Mini Electric Brush

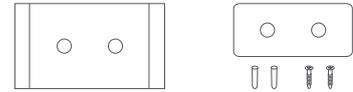

Storage Mount

 
(includes screw × 2, wall plug × 2, and mounting template sticker)



2-in-1 Crevice Nozzle




Extension Rod



Charger

Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.


Component Name

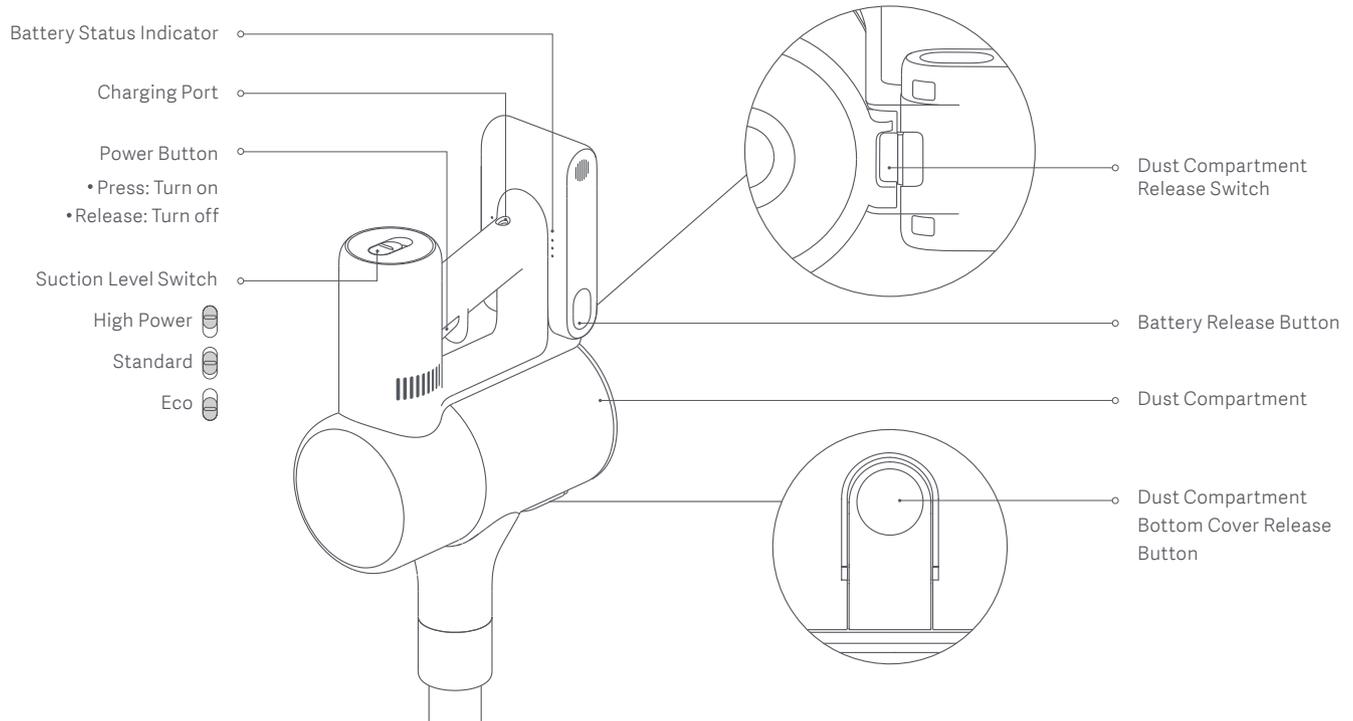

How to Install

Installing the Accessories onto the Vacuum Cleaner


 Insert until it clicks into place

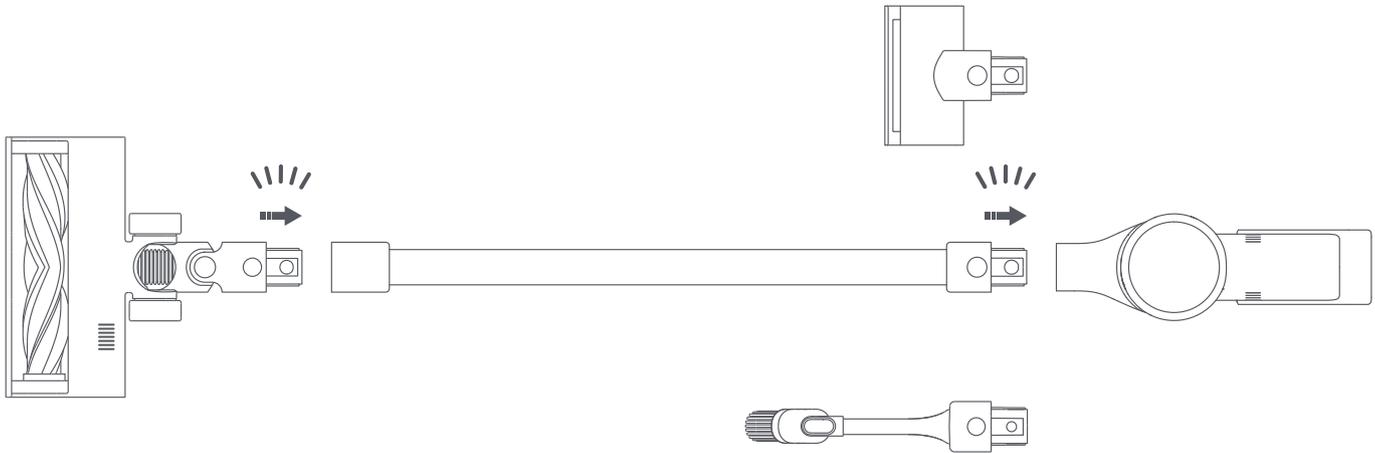

Note: Mini electric brush should not be used with the extension rod.

Installing the Storage Mount

1. Paste the mounting template sticker on the wall. Make sure that the bottom edge of the sticker is parallel to and about 107 cm from the ground.
2. Use a power drill with an 8 mm drill bit to drill holes in the wall according to the positions of the holes on the mounting template sticker. Then use the screws and wall plugs to install the storage mount.

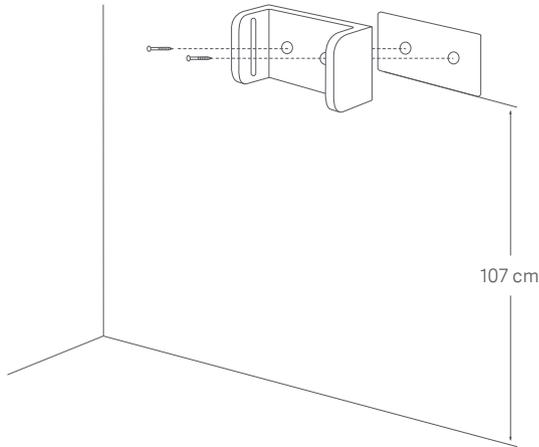

Recommended Height: At least 1.07 meters from the ground

Note: The storage mount should be installed in a cool, dry place with an electrical outlet nearby. Prior to installing, ensure that there are not any wires or pipes in the space directly behind where the mount will be installed.


Charging

Battery Status Indicator

Note: ○ means off, ● means on, and ● with a sunburst means blinking.



Once the vacuum cleaner is fully charged, the indicator will turn off after 5 minutes, and the vacuum cleaner will then enter the energy-saving mode.

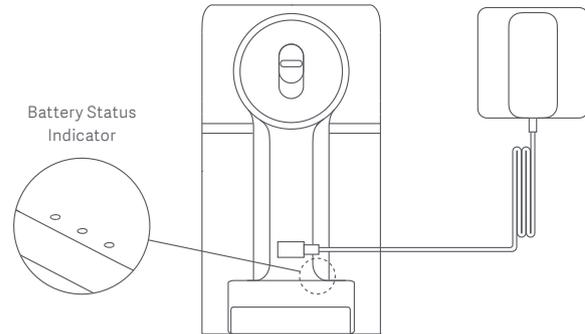

Notes:


- Fully charge the vacuum cleaner before using it for the first time. This will take about 3.5 hours.
- The vacuum cleaner cannot be used while charging.
- Vacuuming at the highest suction level for a prolonged period will cause the battery to heat up, which may increase the charging time. Before charging the vacuum cleaner, it is better to cool it down for 30 minutes.

How to Use


Using Different Accessories

2-in-1 Crevice Nozzle: Suitable for vacuuming hard-to-reach places, such as corners of doors, windows, walls, and stairs, as well as sofas and table surfaces.

Note: Press the release button on the 2-in-1 crevice nozzle to adjust the position of the brush to meet your cleaning needs.

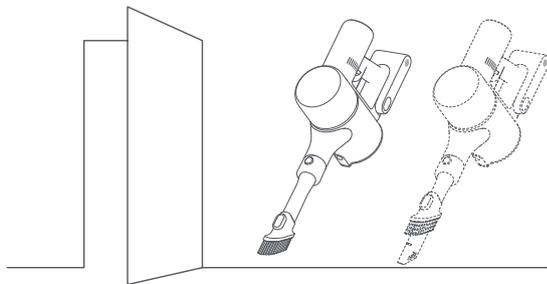


Mini Electric Brush: For vacuuming dirt, pet hair, and other stubborn debris from sofas, bedding, and other fabric surfaces.

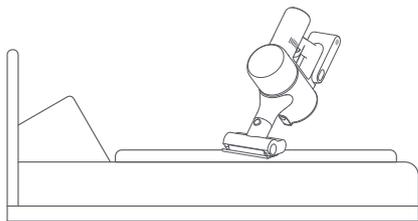


High Torque Brush Bar: For cleaning different types of flooring such as wood, marble, tile, and carpet.

Note: The high torque brush bar can be attached directly to the vacuum cleaner.

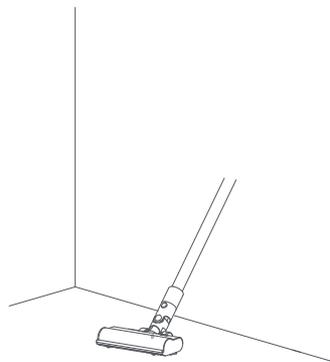

Storage Mount: The vacuum cleaner can be placed on the storage mount when it is not in use.

Note: Do not put the vacuum cleaner alone on the storage mount. Place it on the storage mount after connecting it with the extension rod and the high torque brush bar.

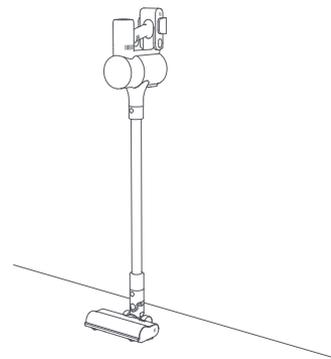

Notes:

- If any rotating part becomes stuck, the vacuum cleaner may shut off automatically. Remove any trapped foreign objects, then resume use.
- When the high-temperature protection for the battery is triggered, the vacuum cleaner will automatically stop working. Wait until the battery temperature returns to normal, then resume use.


Care & Maintenance

Maintenance Precautions

- Always use genuine parts to keep your warranty from being voided.
- If the filter, extension rod, or high torque brush bar becomes clogged, the vacuum cleaner will stop working shortly. To restore its functionality, clean the clogged component.
- If the vacuum cleaner will not be used for an extended period, fully charge it and disconnect it from the power then store it in a cool, low-humidity environment away from direct sunlight. To avoid over-discharging the battery, recharge the vacuum cleaner at least once every three months.


Cleaning the Vacuum Cleaner

Wipe the vacuum cleaner with a soft, dry cloth.

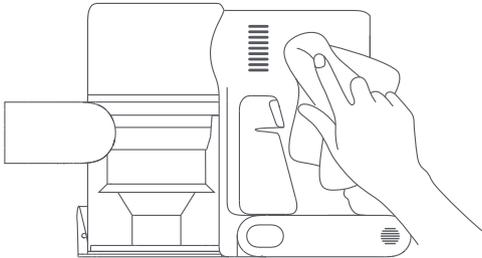


Cleaning the Dust Compartment, Pre-filter, and Cyclone Assembly


1. The vacuum cleaner's cleaning ability will be reduced if the dust compartment is filled to the "MAX" mark. To regain performance, empty the dust compartment in a timely manner. Before emptying the compartment, make sure the vacuum cleaner is disconnected from the power, and do not press its power button.

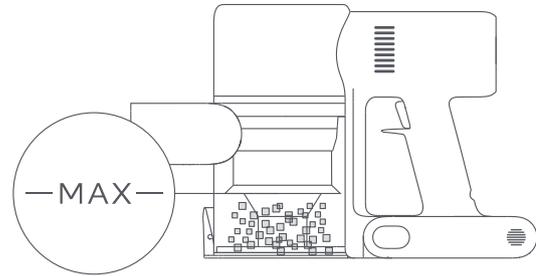


-
2. Press the dust compartment bottom cover release button, then empty the contents.

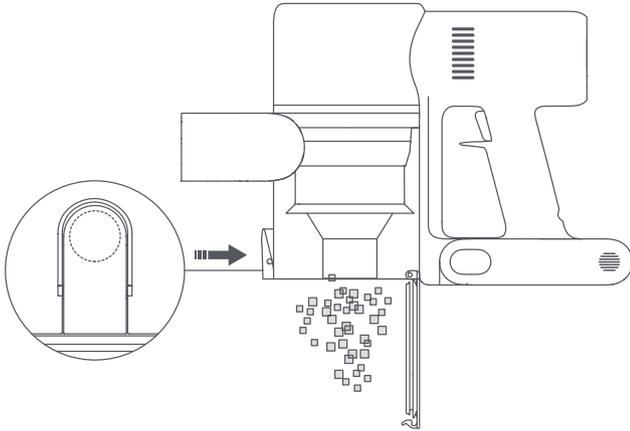


3. Pull the dust compartment release switch in the direction illustrated in image ①, then remove the dust compartment from the vacuum cleaner as illustrated in image ②.

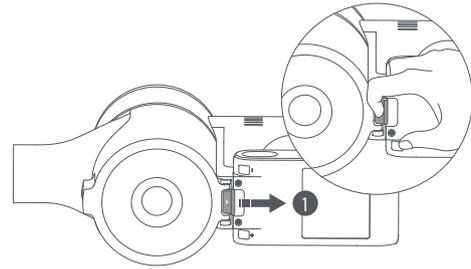


Dust Compartment Release Switch

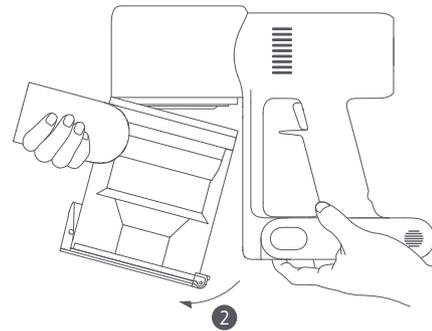

4. Remove the pre-filter first, then lift the handle of the cyclone assembly and turn to counterclockwise until it stops, then pull to lift out the cyclone assembly.

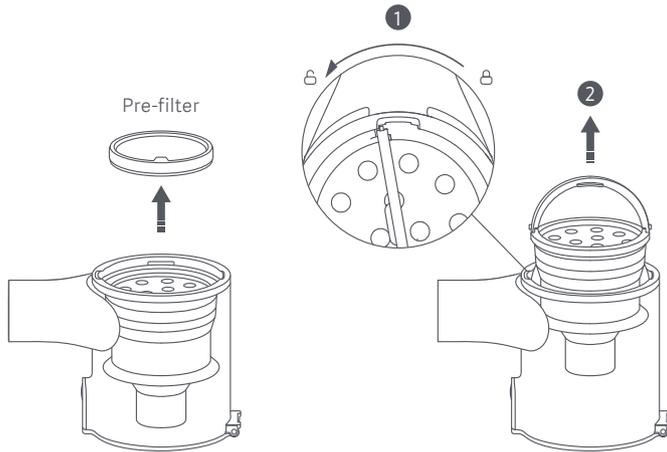

5. Rinse the pre-filter, cyclone assembly, and dust compartment with water until they are clean, then set each component aside to thoroughly dry for at least 24 hours.

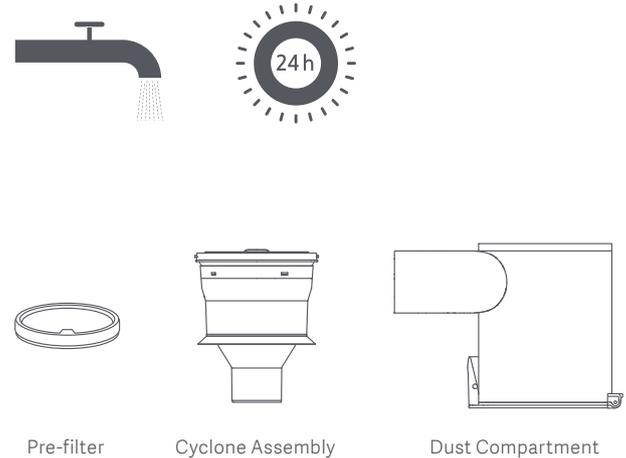


Notes:

- The dust compartment should be rinsed out at least once a month.
- The pre-filter and cyclone assembly should be cleaned once every 3 to 4 months.

-
6. Wipe the contact points of the vacuum cleaner with a soft dry cloth if they are dirty.


Notes:

- Do not use detergents, polishes, or air fresheners to clean the dust compartment.
- Do not clean the dust compartment, pre-filter, or cyclone assembly in a dishwasher or washing machine, nor attempt to dry any component in a tumble dryer, oven, microwave, or near an open fire.

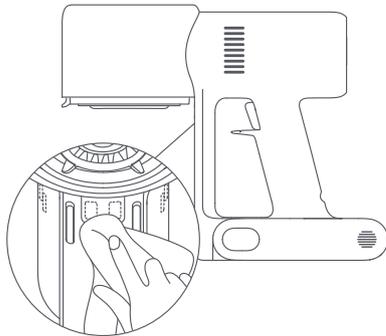


Installing the Dust Compartment, Pre-filter, and Cyclone Assembly

1. Insert the cyclone assembly vertically into the dust compartment, and make sure that the handle of the cyclone assembly line up with the slot on the left side of the dust compartment. Turn the handle clockwise until it locks, then flip the handle down.
2. Place the pre-filter with its front side facing up into the cyclone assembly.

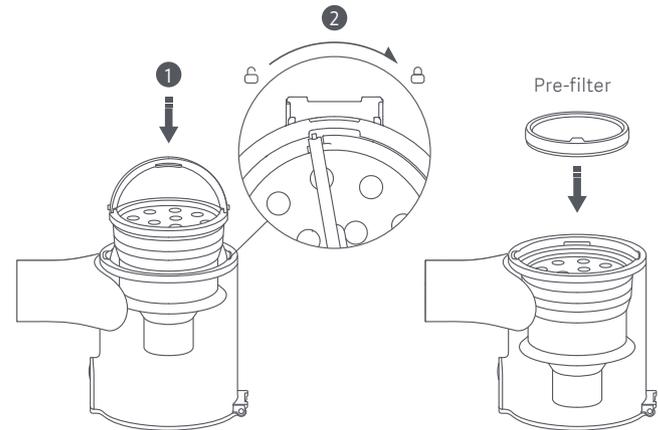


-
3. Slightly tilt the dust compartment so its slot aligns with the clip on the vacuum cleaner. Then gently push the dust compartment until it clicks into place.

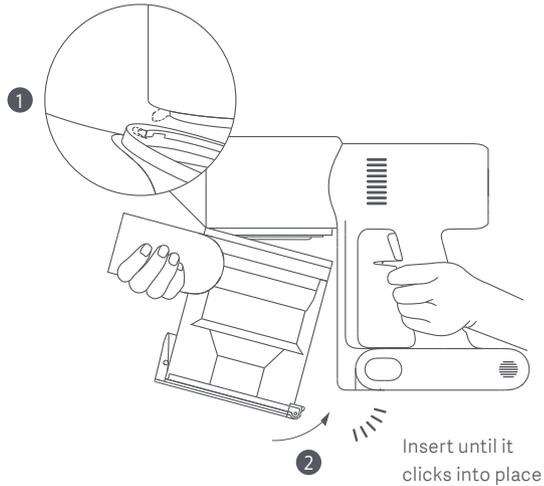

Cleaning the Filter

1. Remove the dust compartment as shown in the figure.

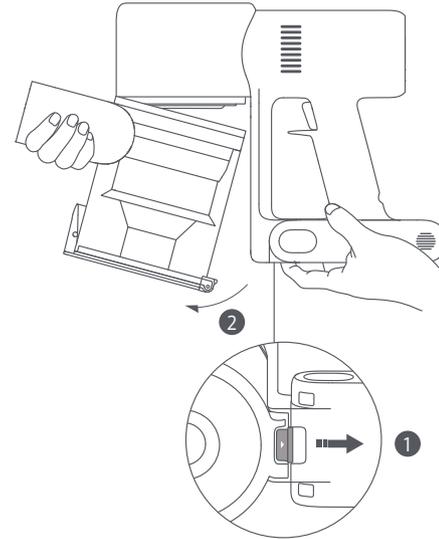


Dust Compartment Release Switch


Notes:

- It is recommended to clean the filter once every 4 to 6 months.
- It is recommended to replace the filter once every 6–12 months according to the actual using condition of the filter.

-
2. Remove the filter from the vacuum cleaner by pulling it down in the direction shown in the figure.

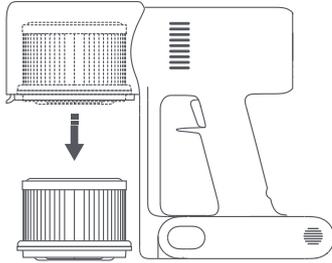


3. Clean the filter with clean water. Make sure you rotate the filter 360° to thoroughly remove all dust caught in the filter. Lightly tap the filter several times to remove any excess dirt.

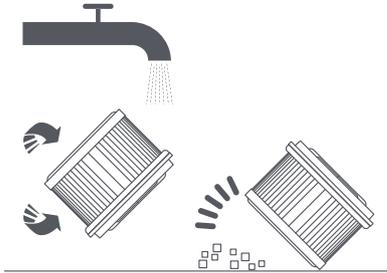

Notes:


- Only use clean water to clean the filter. Do not use detergent.
- Do not attempt to clean the filter with a brush or finger.

4. Allow the filter to thoroughly dry for at least 24 hours.

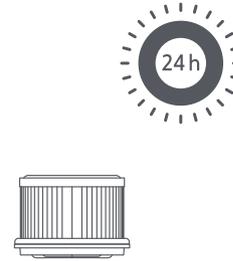


Installing the Filter

1. Insert the filter into the vacuum cleaner and gently press down, as illustrated.

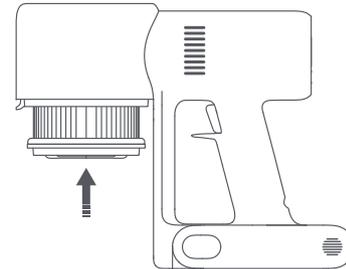


2. Reinstall the dust compartment.

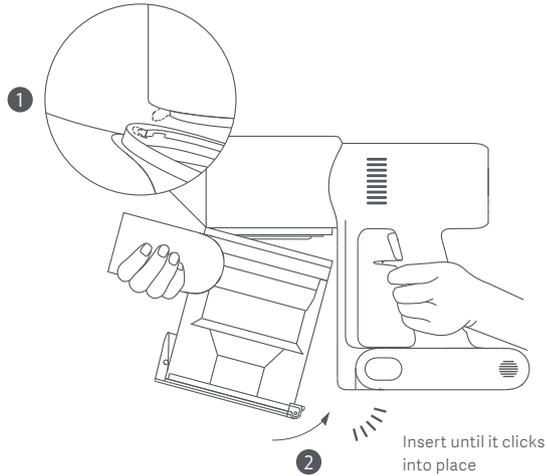


Cleaning the High Torque Brush Bar


1. Turn the lock counterclockwise until it stops, then remove the roller brush from the high torque brush bar.

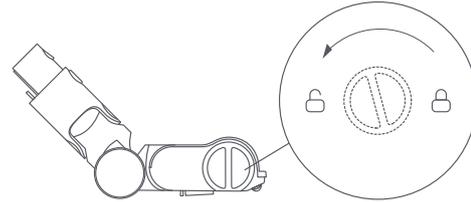


2. Use scissors to cut and pick out any hair or other debris tangled around the roller brush. Wipe away excess dust from the slot and clear plastic cover using a dry cloth or paper towel.

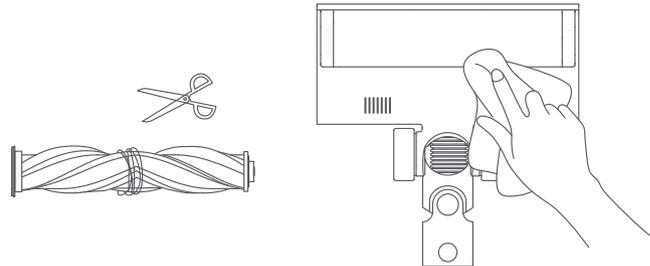

3. After extended use, the roller brush may become dirty and should be washed. After washing, allow the roller brush to dry thoroughly by standing it upright in a well-ventilated area for at least 24 hours.

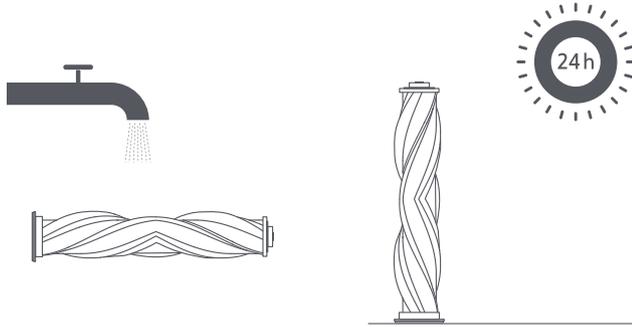


4. Make sure the roller brush is completely dry, and then align the lock on the top of the roller brush with  to reinsert it. Turn the lock clockwise to  to install the roller brush in place.

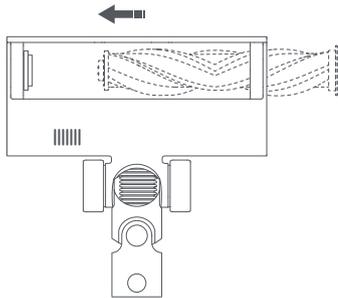


Cleaning the Mini Electric Brush

1. Use a proper tool to turn the lock counterclockwise until you hear a click.

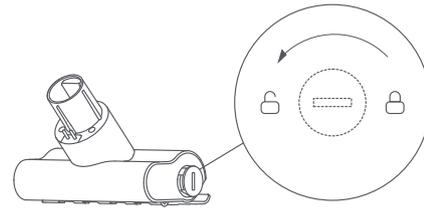


2. After unlocking the roller brush, remove it from the mini electric brush, then rinse and clean the roller brush.

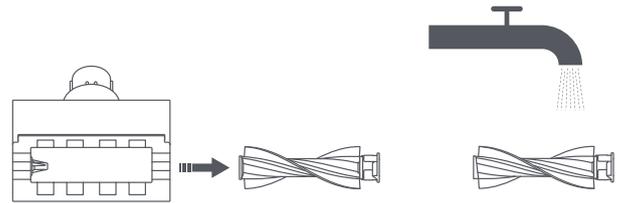

3. After washing, allow the roller brush to dry thoroughly by standing it upright in a well-ventilated area for at least 24 hours.




4. Once the roller brush is dry, reinstall it by following the disassembly steps in reverse.

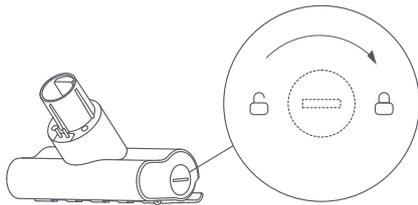

Battery Pack

The vacuum cleaner contains a removable rechargeable lithium-ion battery pack which has a limited number of recharge cycles. After extended use, the battery pack may no longer hold a charge. If this happens, it means the battery pack has reached the end of its life cycle and needs to be replaced.

1. Press down the battery pack release button and slide the battery pack to the right, as illustrated, to remove it.
2. Install the new battery pack.

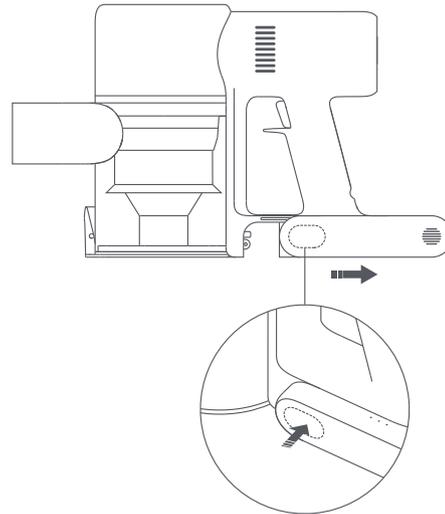

Specifications

Cordless Vacuum Cleaner			
Model	B206	Rated Voltage	25.2 V ---
Charging Voltage	30.8 V ---	Battery Capacity	2500 mAh (Nominal Capacity) 2400 mAh (Rated Capacity)
Rated Power	400 W	Dust Compartment Capacity	0.6 L
Charging Time	Approx. 3.5 hours	Net Weight	3.4 kg
Item Dimensions	1286 × 214 × 256 mm		
High Torque Brush Bar		Mini Electric Brush	
Model	G9-01	Model	1C-02
Rated Power	40 W	Rated Power	20 W
Rated Voltage	25.2 V ---	Rated Voltage	25.2 V ---
Charger			
Manufactured by	Zhongshan Baolijin Electronic Co., Ltd.	Average Active Efficiency	87.5%
Model	BLJ24W308080P-V	Efficiency at Low Load (10%)	77.9%
Input	100–240 V~ 50/60 Hz 0.8 A	No-load Power Consumption	0.10 W
Output	30.8 V --- 0.8 A		
Rechargeable Lithium-ion Battery Pack			
Model	V2209-7S1P-BCA	Nominal Capacity	2500 mAh
Nominal Voltage	25.2 V ---	Rated Capacity	2400 mAh
Energy	60.48 Wh		

Regulatory Compliance Information

EU Declaration of Conformity



We Dreame (Tianjin) Information Technology Co., Ltd., hereby, declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.mi.com/global/service/support/declaration.html>

For detailed e-manual, please go to www.mi.com/global/service/userguide

WEEE Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Battery Safety Precautions


- The lithium-ion battery pack contains substances that are hazardous to the environment. Before disposing of the vacuum cleaner, please first remove the battery pack, then discard, or recycle it in accordance with local laws and regulations of the country or region it is used in.
- Under abusive conditions, liquid may be ejected from the battery. Avoid contact with liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.

Troubleshooting

Issue	Possible Cause	Solution
The vacuum cleaner does not work.	It is out of battery or has low battery.	Fully charge the vacuum cleaner, then resume use.
	It enters into overheat protection mode triggered by a blockage.	Clear any blockages and restart the vacuum cleaner when it cools down.
	Its suction opening or airway passage is blocked.	Clear any blockages from suction opening or airway passage.
The suction power reduces.	The dust compartment is full and/or the filter is clogged.	Empty the dust compartment and clean the filter.
	The high torque brush bar, the extension rod, or other parts are blocked.	Clear any blockages from the high torque brush bar, the extension rod, or other parts.
The motor makes a strange noise.	The main suction opening or the extension rod is blocked.	Clear any blockages in the main suction opening or the extension rod.
The battery indicator does not light up while charging.	The charger is not connected to the vacuum cleaner.	Make sure the charger is plugged in correctly.
	The battery is fully charged and went into sleep mode.	The vacuum cleaner can be used normally.
	If the problem still persists after ruling out the above two possibilities, please contact after-sales service for help.	
The battery charges slowly.	The battery temperature is too low or too high.	Wait until the battery temperature normalizes, then resume use.

Error Description of Battery Status Indicator

The vacuum cleaner will stop working if any error occurs, and the indicator will blink white. Please refer to the information below for your solution.

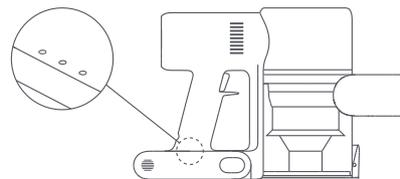

Indicator Status	Indicator Description	Possible Cause	Solution
☀️ ○ ○	The first indicator blinks white for 5 seconds, then goes off.	Battery Depleted	Recharge soon.
☀️ ☀️ ○	The first and second indicators blink white for 5 seconds simultaneously, then go off.	Roller Brush Stuck	Refer to "Cleaning the High Torque Brush Bar" in the Care & Maintenance section for directions on how to remove hair and other debris caught in the roller brush.
☀️ ☀️ ☀️	All of the three indicators blink white for 5 seconds simultaneously, then go off.	Airway Blocked	Check if any blockages caught in the dust compartment, extension rod, and/or high torque brush bar.
● ○ ○	The first indicator is red after turning on the vacuum cleaner.	Battery Damaged	Please contact after-sales service to arrange maintenance.
☀️ ○ ○	The first indicator blinks red when charging the vacuum cleaner.	Charger Incompatible	Only use the original charger to charge the vacuum cleaner.

- For further information, please go to www.mi.com
Manufactured for: Xiaomi Communications Co., Ltd.
Manufactured by: Dreame (Tianjin) Information Technology Co., Ltd. (a Mi Ecosystem company)
Address: Room 2112-1-1, South District, Finance and Trade Center, No.6975 Yazhou Road, Dongjiang Bonded Port Area, Tianjin Pilot Free Trade Zone, Tianjin, China

Importer:
Beryko s.r.o.
Pod Vinicemi 931/2, 301 00 Plzeň
www.berko.cz



Made in China