

XIOMI

Smart Pet Food Feeder User Manual




Safety Precautions

Read this manual carefully before use, and retain it for future reference.

- Do not put anything other than dry pet food into the food compartment, otherwise, it may cause the feeder to malfunction and could even compromise the safety of your pet.
- To prevent your pet from knocking over the feeder, it is recommended to place the feeder in a corner or against a wall.
- Keep your pet from chewing on the power cord.
- When dispensing food, do not touch the food outlet door (inside the food outlet).
- The feeder is not recommended for pets under three months of age.
- Children should only operate this feeder under the guidance of an adult.
- It is recommended to replace the desiccant cartridge every month. Do not use the desiccant cartridge if it is damaged or broken.
- Do not soak the desiccant cartridge in water.
- Regularly clean the dispensing tube to ensure smooth dispensing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.


For detailed e-manual, please go to www.mi.com/global/service/userguide

Product Overview

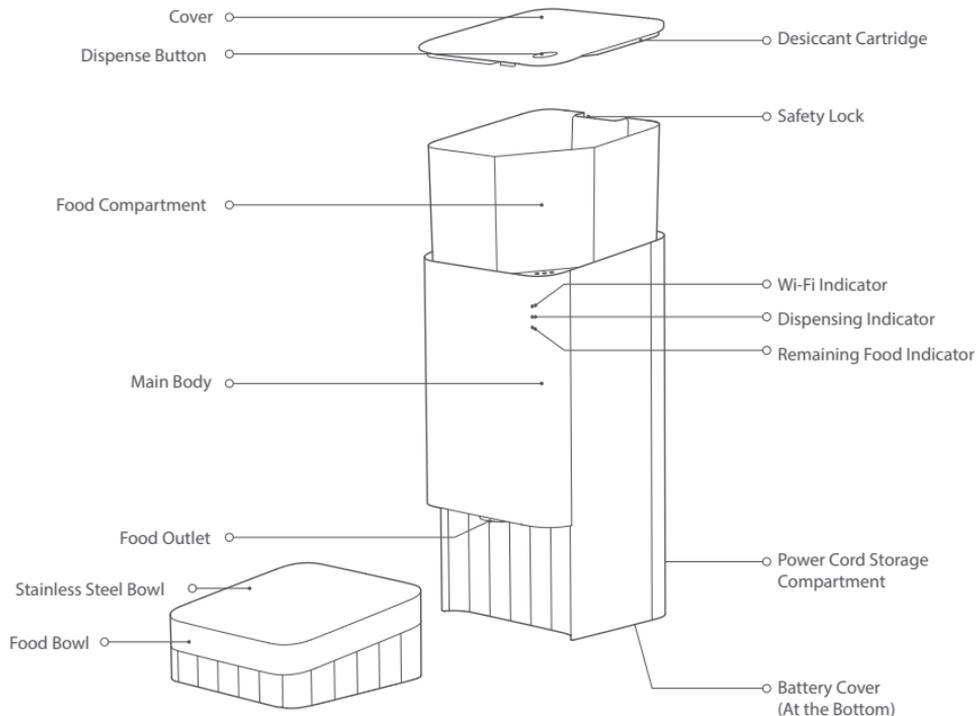


Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

 Package Contents




Feeder

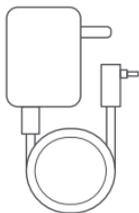

Power Cord



Food Bowl

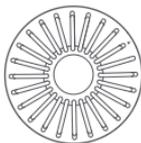

Desiccant Cartridge




User Manual



Warranty Notice

How to Install

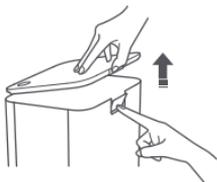


1. Remove the Cover

Press the safety lock on the back of the feeder and lift the cover.

2. Install the Desiccant Cartridge

Remove the cover and install the desiccant cartridge onto the recessed area of the cover. Then rotate the desiccant cartridge until its triangle mark is aligned with the mark . Make sure the desiccant cartridge is secured in place. It is recommended to replace the desiccant cartridge every month.


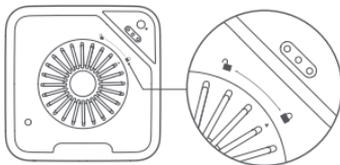


3. Close the Cover

Align the front of the cover with the feeder and then press the cover down to close.

4. Install the Food Bowl


Place the feeder on a flat surface and attach the food bowl to the feeder as illustrated.

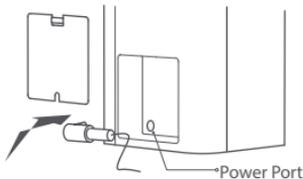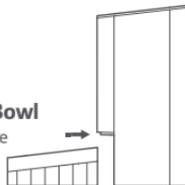

5. Connect to Power

Take out the power cord from the power cord storage compartment on the back of the feeder. Then connect the power cord to the power port and plug it into an electrical outlet.

How to Use

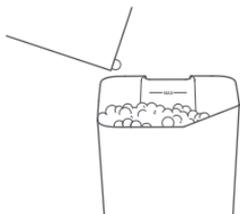


1. Add Dry Pet Food

Fill the food compartment with dry pet food. Make sure the food does not exceed the MAX line and then close the cover. This feeder supports dispensing pet food with a diameter of 5–12 mm, and does not support freeze-dried and special-shaped pet foods.



3. Schedule a Feed




After connecting the feeder to the Mi Home/Xiaomi Home app, you can schedule feeds in the app, including setting the dispensing time and the quantity of food.

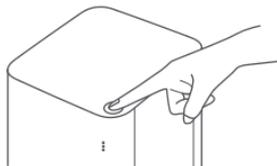

2. Manually Dispense Food

Press the dispense button to dispense one portion of pet food (approx. 5*g). Press and hold the dispense button to continuously dispense food. A maximum of 30 portions can be dispensed at a time.


*5g is a reference value. Due to the difference in composition, shape, and size of the dry food used, the actual weight for each portion may vary.

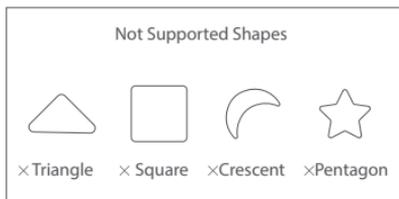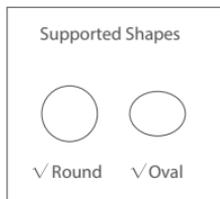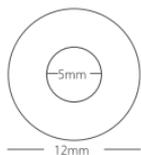

Suitable for pet food with a diameter of 5–12 mm

Note: Do not use freeze-dried or special-shaped pet food (including but not limited to the above examples), or pet food in large diameter, to prevent the feeder from malfunctioning or being damaged.

Install the Spare Batteries

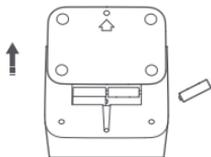

Unscrew and open the battery cover on the bottom of the feeder. Insert four AA batteries into the battery compartment, and make sure the positive (+) and negative (-) poles are correctly positioned. Then reinstall the battery cover and screw it.

Note: Spare batteries need to be purchased separately, and only alkaline batteries are supported. Before installing the batteries, make sure the food compartment is empty. The spare batteries are for emergency backup in case of power failure. Please remove the batteries if you are not planning to use them.

Indicator Description


Indicator Name	Indicator Status	Feeder Status
Wi-Fi Indicator	Blue	Online
	Blinking blue	Awaiting connection
	Orange	Offline
Dispensing Indicator	White	Dispensing
	Continuously blinking orange	Cover not closed
	Orange	Dispensing error, please clean the dispensing tube
Remaining Food Indicator	Off	Plenty of food remaining
	Orange	Insufficient food, please refill the food compartment

Note: The feeder may be malfunctioning if these three indicators are orange at the same time, please contact the after-sales service team for a solution.

Resetting the Wi-Fi & Restoring Factory Settings

Use a needle-shaped object to press and hold the Wi-Fi reset button for two seconds. When the Wi-Fi indicator blinks blue, the Wi-Fi has been reset successfully, and the feeder has been restored to factory settings.

Note: The data will be cleared after reset. Please reconnect the feeder with the app to have your custom settings.

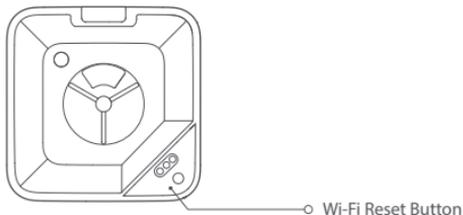

Enabling/Disabling the Wi-Fi

To enable or disable the Wi-Fi, use a proper tool to press and hold the Wi-Fi reset button for seven seconds.

The Wi-Fi indicator is off when the Wi-Fi is disabled, and the indicator blinks blue when the Wi-Fi is reset successfully.

Connect with Mi Home/Xiaomi Home App

This product works with Mi Home/Xiaomi Home app*. Control your device with Mi Home/Xiaomi Home app. Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search "Mi Home/Xiaomi Home" in the app store to download and install it.

Open Mi Home/Xiaomi Home app, tap "+" on the upper right, and then follow prompts to add your device.


* The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.

Note: The version of the app might have been updated, please follow the instructions based on the current app version.



Care & Maintenance

1. Open the cover and remove the food compartment. Rotate the dispenser tray at the bottom of the food compartment to remove the tray. Then remove the food bowl.
2. Clean the dispensing tube with a cloth or brush to keep it clean and clear.
3. Clean the food compartment, the food stirrer, the dispenser tray, and the food bowl one by one.
4. Once all the parts are clean and dry, reinstall the dispenser tray, the food compartment, and the food bowl.
5. To install the food compartment, rotate the food stirrer until the food compartment is fully inserted into the body of the feeder.

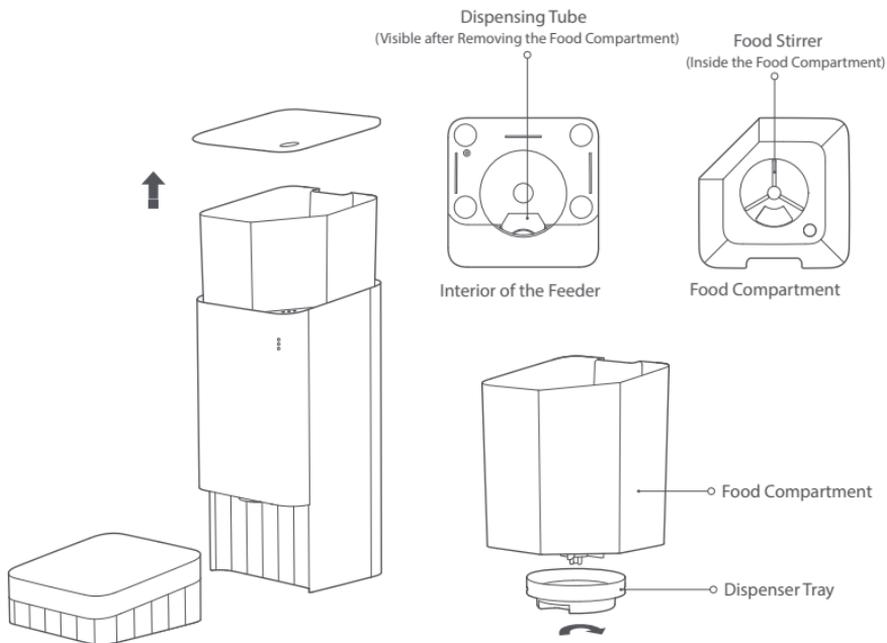

Specifications

Name	Xiaomi Smart Pet Food Feeder	Capacity	3.6 L
Model	XWPF01MG-EU	Net Weight	3 kg
Color	White	Power Cord Length	1.5 m
Input	5.9 V $\overline{=}$ 1.0 A	Rated Power	5.9 W
Item Dimensions	Operating Humidity	Operating Temperature	
311 × 180 × 387 mm	10%–90% RH	-10°C to 40°C	

Radio Frequency and Radio Transmission Power

RF Specification	Working Frequency	Maximum Output Power
2.4 G Wi-Fi	2412–2472 MHz	19 dBm

Power Adapter

Manufacturer	Jiangsu Chenyang Electronics Co., Ltd.	Output Current	1.0 A
Model Identifier	CYXT18–059100E3	Output Power	5.9 W
Input Voltage	100–240 V AC	Average Active Efficiency	≥74.88%
Input AC Frequency	50/60 Hz	Efficiency at Low Load (10%)	≥64.88%
Output Voltage	5.9 V	No-load Power Consumption	≤0.075 W

Regulatory Compliance Information

Europe-EU declaration of conformity



Hereby, Beijing Kitten&Puppy Technology Co., Ltd. declares that the radio equipment type XWPF01MG-EU is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/service/support/declaration.html>.

WEEE Disposal and Recycling Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

For detailed e-manual, please go to www.mi.com/global/service/userguide

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Beijing Kitten&Puppy Technology Co., Ltd.

(a Mi Ecosystem company)

Address: Room Q-101, Floor 2, Q Area, Anning Zhuang Back Street, Haidian District, Beijing,
China For further information, please go to www.mi.com

Importer:

Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

www.beryko.cz