 


5. The air fryer will beep and "Program completed" will appear on the display to indicate that the cooking program has been completed. Carefully take out the basket and use clamps to remove the food.

Caution: When cooking is completed, the basket is very hot, so do not touch it to avoid from getting scalded.

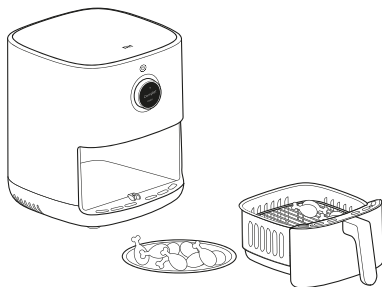

Other Operations

 
1. Language settings

- Turn the air fryer, go to settings, and press the control knob to enter the language selection screen.
- Turn the control knob to the desired language and press it to confirm.



2. Manual mode

- While standby, turn the control knob and select the manual mode, press it to set the temperature and turn it to adjust to the desired cooking temperature, then press it to set the time and turn it to adjust to the desired cooking time, and press it to start the above set program.

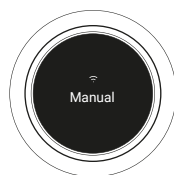


3. Turning over the food

- If the cooking time is more than 8 minutes (except for cake and dried fruits), the air fryer will remind you to turn over or shake the food.
- "Please shake the food" will blink on the display screen, and it will beep three times. Please pull out the basket, turn over or shake the food, and then completely insert the basket back into the air fryer.



4. Scheduled cooking

 
- While standby, turn the control knob and select the schedule function, set the completion time, cooking program, cooking temperature and time, and press the control knob to confirm and start the scheduled cooking program.
- Once the scheduled time is over, the air fryer has completed the scheduled cooking program.

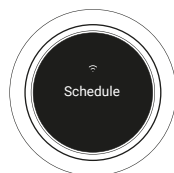

Note: The scheduled time here is the scheduled completion time, for example six hours, which means cooking will be completed in six hours, and the scheduled time cannot be shorter than the cooking time.

5. Pausing

 - Press the control knob to pause the cooking program while cooking.
- Press the control knob to continue the cooking program while it is paused.

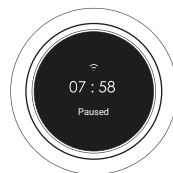

6. Stopping program

- Press and hold the control knob for 0.5 seconds, the display screen indicates to confirm the cancellation of the current cooking program, turn the control knob and select yes or no. Once cancelled, it will enter standby mode.



Maintenance Tips

- Only professionally trained and qualified technicians should repair the air fryer.
- Others should not repair the air fryer without permission to avoid serious consequences.
- When the air fryer is acting abnormally, please refer to Troubleshooting before contacting the customer service.
- If the issue cannot be resolved, please unplug the power cord and disconnect it and contact after-sales service.

Cleaning & Maintenance

Unplug the power cord before cleaning and maintaining the air fryer, and wait for it to cool down to room temperature or a safe temperature before operating it. Please remove the basket when cleaning the inside of the air fryer.

1. Air fryer surface

The surface of the air fryer can be wiped with a dry, soft cloth or a sponge moistened with a neutral cleaning detergent.

2. Cavity

To remove stains from the inside of the air fryer, apply a suitable amount of detergent diluted in hot water to its surface and let it sit for about 10 minutes, then use a soft sponge moistened with water to wipe away the detergent residue.

3. Basket

Clean the air fryer after each use. The basket of the air fryer is coated, so do not use any steel wool or other abrasive cleaning materials to clean it as they may damage the coating.

4. Frying plate/Grill

You can use a soft, cotton cloth or sponge moistened with neutral detergent to wipe it clean, then moisten it with water to wipe away the detergent residue.

Note: The basket, frying plate, and grill can be separated and placed in the dishwasher for cleaning, but the air fryer cannot be washed in water or cleaned in the dishwasher.

Cleaning Precautions

1. After using the air fryer, please unplug the power plug in time and do not place the air fryer near a source of fire nor immerse it in water. Do not place the power plug directly on the air fryer to prevent the plug from scratching its surface.
2. Cleaning and maintenance should only be done after the air fryer has cooled down.
3. Do not use any corrosive or abrasive cleaning materials or detergents.


Note: Regular cleaning and maintenance of the air fryer will help to extend its service life.

Troubleshooting

Issue	Possible Causes	Solutions
The air fryer doesn't function.	The air fryer is not connected to a power supply.	Plug the power cord into a grounded electrical outlet.
	The basket is not pushed	Pull out the basket and push it back into place.
The OLED display shows E1.	The sensor has a broken circuit.	Contact after-sales service.
The OLED display shows E2	The sensor has a short circuit.	Contact after-sales service.
The fan doesn't rotate.	The fan blade is stuck.	Contact after-sales service.
	The motor is damaged or other components have a broken circuit	Contact after-sales service.
White smoke is coming out.	Cooking oily ingredients.	When you fry ingredients containing more fat, there will be a lot of smoke, which is normal.
	The air fryer still contains grease residue from the previous cooking program.	Ensure that you clean the air fryer after each cooking program.
Can't insert the basket into the air fryer smoothly.	Too many ingredients in the basket.	The ingredients in the basket can't exceed the maximum mark.
	The basket is not properly inserted.	Properly insert the basket.
The schedule function doesn't function as requested.	The scheduled time is too short.	The scheduled time is shorter than the cooking time.
	The scheduled time is not saved.	The scheduled time is saved and carried out by pressing the control knob.
Wi-Fi can't be connected.	Check whether the Mi Home /Xiaomi Home app is up to date.	Update the Mi Home/Xiaomi Home app to the latest version.
	Check whether the Wi-Fi's signal is strong enough.	Move to a location where the signal is strong enough.
Unable to connect the air fryer.	Check whether the Wi-Fi functions normally.	Check whether the Wi-Fi is connected normally or reset the Wi-Fi to reconnect.

Electrical Diagram

 - ① OLED Display
- ② Safety Switch
- ③ Control Panel
- ④ High-speed Motor
- ⑤ Fuse
- ⑥ Low-speed Motor
- ⑦ Heating Element
- ⑧ Power Board
- ⑨ Fuse

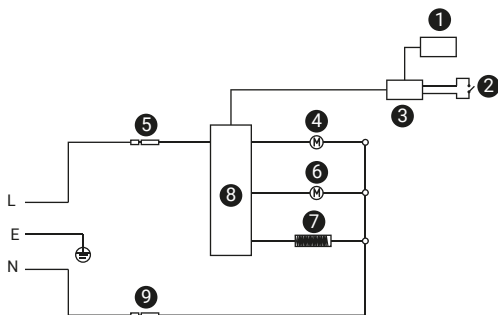

Specifications

Name: Air Fryer	Rated Capacity: 3.5 L	Color: White
Model: MAF02	Rated Frequency: 50–60 Hz	Net Weight: 3.9 kg
Rated Power: 1500 W	Rated Voltage: 220–240 V~	Gross Weight: 5.2 kg
Maximum Output Power : <20 dBm	Package Dimensions: 370 × 295 × 345 mm	
Operating Temperature: -10°C to 40°C	Operation Frequency : 2412–2472 MHz	
Wireless Connectivity: Wi-Fi IEEE 802.11 b/g/n 2.4 GHz		

Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Manufactured for: Xiaomi Communications Co., Ltd.
 Manufactured by: Ningbo Careline Electric Appliance Co., Ltd.
 Address: 558#, Wei'er Road, Andong Industrial Zone, Andong Town,
 Cixi, Ningbo, Zhejiang, China
 For further information, please go to www.mi.com

User Manual Version: V1.0