


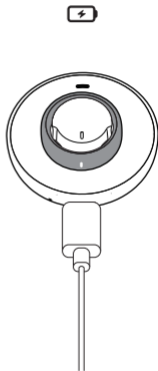


HELIO RING

User Manual

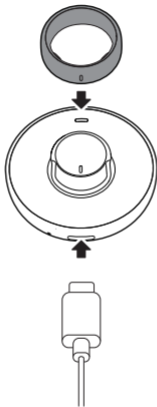

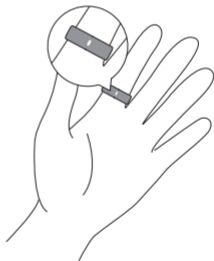

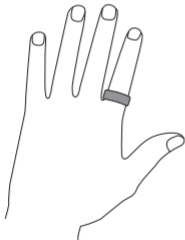

Basic Parameters

Product Name: Smart Ring

Model: A2321

Battery capacity: 18.5 mAh–20.5 mAh (depending on the ring size)

Bluetooth Version: BLE V5.0

Waterproof rating: 10 ATM

Working environment temperature: 0°C~45°C

Input: DC 5V 165 mA

Device Requirements: Android 7.0 or iOS 14.0 and above

Package contents: Ring, Charger, User Manual

Binding Ring

1. Use your mobile phone to scan the QR code on the right, download and install the Zepp APP.
2. Plug the charger into a USB power source, such as a laptop or a portable power adapter.
3. Place the ring lightly on the charger, the indicator light will flash blue, indicating that your ring is ready for pairing.
4. Open the Zepp APP, register an account and log in. Make sure your device's Bluetooth function is enabled.
5. In the APP, click "Profile – My Devices – Add", select the ring, and start searching for devices.
6. After finding your ring, click "Pair". After successful binding, the charging dock indicator light will turn white and show a gradient pulsating effect.



Download Zepp App

Indicator Status Descriptions

Indicator Status	Descriptions
Closed	The charging dock is not plugged in, and the ring is in idle state.
Slowly pulsing white	The ring is charging and has successfully paired.
White	The ring is fully charged and has been successfully paired.
White, turns off after a few seconds	Charging base is connected to power but the ring is not detected.
Slow pulsing blue	The ring is charging but hasn't successfully paired with the device yet.
Flashing blue	The ring is ready to pair with the Bluetooth device, waiting for the APP's pairing request.
Blue	The ring is fully charged but has not yet been successfully paired with the device.
Red	Indicates there may be issues with the ring or charger, such as freezing.

Official website: www.amazfit.com

Please check the FAQ on the website: <https://support.amazfit.com/en>.

Regulatory Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AC8UA2321

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

Battery Safty Notice

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. This product contains a Rechargeable Lithium-ion battery: (model: 1150PF4A). The nominal voltage of the battery is 3.85V.
5. Do not force discharge, recharge, disassemble, heat above 130 C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
6. The product contains non-replaceable batteries.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Anhui Huami Information Technology Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Maintenance and Upkeep

1. The size of fingers may vary at different times of the day, making it difficult to remove a ring. If the ring is stuck, use cold water and mild soap to moisten the finger, and gently rotate the ring to remove it. Alternatively, raise the finger above the heart and wait for the blood pressure to decrease before attempting to remove it again.
2. In case of emergency or discomfort, if you cannot remove the ring by yourself, please seek medical help immediately.
3. Use a soft cloth or mild soap and water to clean your hands and ring at the same time.
4. Avoid wearing rings while showering, bathing, swimming, and snorkeling to prevent wear.
5. When doing strength training, using shovels or other heavy tools, or handling heavy objects made of metal, ceramic, or stone, please try to avoid wearing down the ring.
6. When encountering items or rings made of other metals, ceramics, or stone materials, please be careful to avoid abrasion. Rings may scratch other soft metal jewelry or items they come into contact with, and vice versa.

Precautions

1. Please keep the ring out of reach of children, as this product is not suitable for individuals under 18 years old. If a child swallows the ring accidentally, seek medical attention immediately.
2. Avoid exposing the ring to high temperature environments, such as inside a car or under direct sunlight. Do not puncture the ring or open the battery compartment.
3. When handling batteries or using battery devices, avoid wearing rings. In some cases, the positive and negative poles of the battery may come into

contact with the ring, posing a short-circuit risk, similar to a standard metal ring. Please take care to prevent potential electric shock hazards.

4. When moving heavy objects, please be careful not to get your rings caught by fixed structures or heavy objects.
5. This product is not a medical device, the test data and results are for reference only and cannot be used for diagnosis or monitoring of any medical condition.
6. If your finger becomes red and swollen or experiences skin irritation due to wearing a ring, please remove it immediately. If the symptoms persist for more than 2–3 days, it is recommended to consult a dermatologist.
7. We are not responsible for any health issues that may arise from the health information and guidance you obtain through the ring service. If you make any adjustments to your sleep or activity based on the ring service, you voluntarily assume all risks. Sensitivity to physical responses is crucial, for example, if you experience unexpected, repeated, or long-term pain, fatigue, or discomfort due to sleep or activity adjustments, it is recommended to consult a doctor before continuing these adjustments. If your physiological functions and responses are slightly different from the population average due to medical conditions or rare congenital differences, the information and guidance in the ring service may be misleading.

Warranty and Return Policy

The Amazfit Limited Warranty covers Amazfit products against manufacturing defects beginning on the original purchase date. The warranty period is 12 months or another specified period as the applicable consumer laws in the consumer's country of purchase require. Our warranty is in addition to rights provided by applicable consumer laws.



Importer:

Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

www.beryko.cz

Manufactured by: AnHui Huami Information Technology Co., Ltd.

Address: 7/F, Building B2, Huami Global Innovation Center, No. 900,

Wangjiang West Road, High-tech Zone, Hefei City, China (Anhui)

Pilot Free Trade Zone