

XIAOMI Electric Scooter 4 Pro (2nd Gen) User Manual




Read this manual carefully before use, and retain it for future reference.

Safety Reminder




Always steer clear of obstacles.


Watch out for Safety Risk

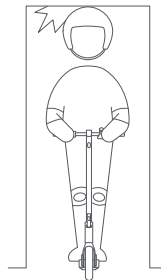


Avoid hitting your head on door frames, elevators, and other overhead obstacles.

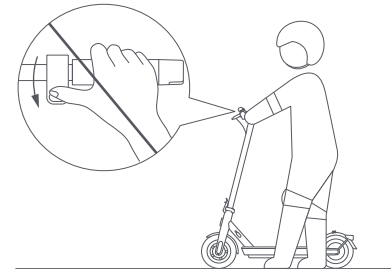

Do not press the accelerator when you are walking alongside the scooter.

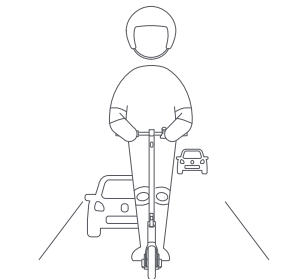



Unless otherwise authorized by the local laws, it is forbidden and illegal to ride on public roads, motorways, and expressways.

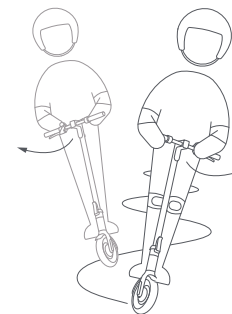


Do not abruptly change the steering direction at high speed.

Do not Try Dangerous Actions

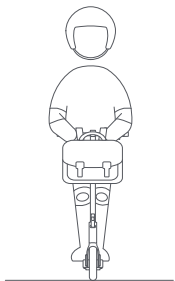


 Do not hang bags or other heavy stuff on the handlebar.




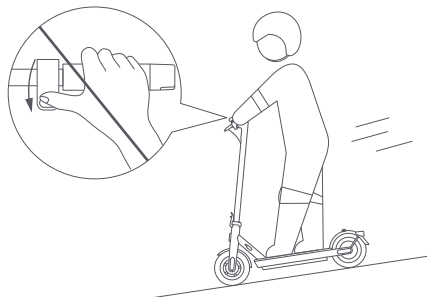
 Do not ride on one foot.




 Do not ride in the rain. Do not ride through puddles or any other (water) obstacles.




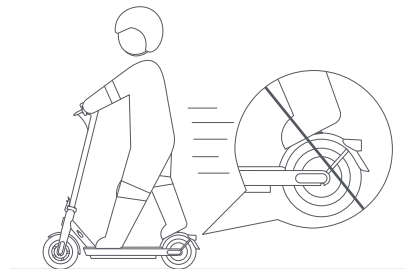
 Do not ride with anyone else, including children.




 Do not accelerate when going downhill, and brake in time to slow down. When on a steep slope, you need to step off the scooter and push.




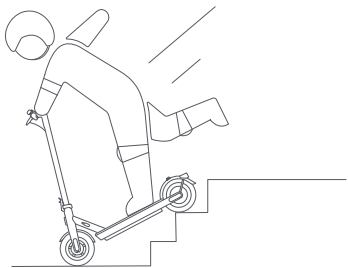
 Do not use mobile phone or wear earphones when operating the scooter.




 Do not keep your feet on the rear mudguard.



 Do not let go of the handlebar while riding.




Do not try riding up or down stairs, nor try jumping over obstacles.

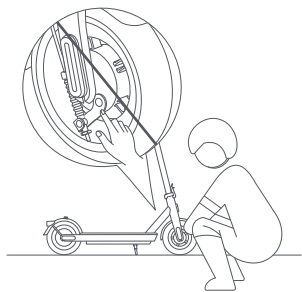

Do not touch the mechanical brake.

Product Overview

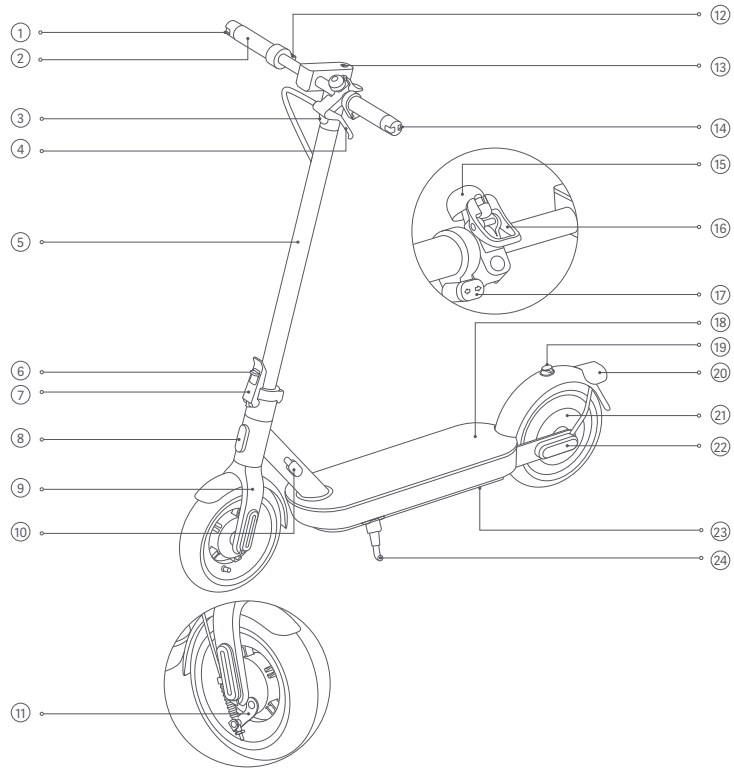

① Right Winglight

② Handlebar

③ Headlight

④ Brake Lever

⑤ Stem

⑥ Quick Release Lever Lock

⑦ Quick Release Lever

⑧ Front Reflector

⑨ Front Fork

⑩ Charging Port

⑪ Mechanical Brake

⑫ Accelerator

⑬ Control Panel & Power Button

⑭ Left Winglight

⑮ Scooter Bell

⑯ Buckle & Bell Lever

⑰ Winglight Buttons

⑱ Deck

⑲ Hook

⑳ Taillight & Rear Reflector


㉑ Wheel Motor

㉒ Side Reflector

㉓ Battery Compartment


㉔ Kickstand

Control Panel & Power Button

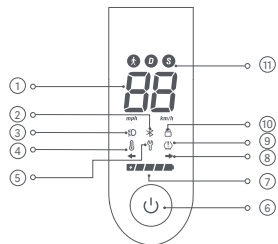

- ① Speedometer: It displays the current speed when the scooter is working. When the scooter has an issue, it displays an error code. When the scooter is charging, it displays the current battery level.
- ② Bluetooth: When the icon lights up, it indicates the scooter has been successfully connected to the mobile device.
- ③ Light: lighting up means the headlight and taillight are on, and going out indicates the headlight and taillight are off. Turn on the scooter, and press the power button to turn the headlight and taillight on or off. You can enable the function of auto lights on/off in the Mi Home/Xiaomi Home app, and the headlight and taillight will automatically turn on or off according to the ambient brightness during riding.
Note: When the function of auto lights on/off is enabled in the app, pressing the power button will temporarily disable it. You can restart the scooter to resume using this function, or enable it in the app.
- ④ Temperature Warning: If the battery temperature is too high or too low, the thermometer icon will be on. This will result in reduced acceleration and possibly charging issues. Use or charge the scooter after its battery temperature returns to the normal operating range.

- ⑤ Error Notification: When the wrench icon displays red, it indicates that the scooter has an error.
- ⑥ Power Button: Press the button to turn the scooter on, and hold the button for 2 to 3 seconds to turn the scooter off. When the scooter is on, press the button to turn on/off the headlight and taillight, and press twice to cycle through the modes.
Note: The scooter will turn off automatically when it enters standby mode for more than 10 minutes. The standby mode means that the scooter is not being charged or not locked when it is on and not running.
- ⑦ Battery Level: The battery power is indicated by 5 bars, each representing approximately 20% of a full battery.
- ⑧ Winglight Indicating: When the scooter is on, press the left or right winglight button, then the corresponding winglight and the indicator on the control panel will blink. Meanwhile, the buzzer will respond at the same frequency. Press the button again to turn off the winglight.
- ⑨ Inflation: When the inflation icon is on, it means that it is time to maintain the tires. Check the tire pressure and inflate the tires immediately to avoid tire damage caused by inadequate tire pressure. The recommended tire pressure is 45–50 psi.
Note: After performing maintenance, follow the instructions in the app to disable the inflation reminder.
- ⑩ Motor Lock: lighting up means the motor is locked, and going out indicates the motor is unlocked. You can only lock or unlock the motor via the Mi Home/Xiaomi Home app. For detailed instructions, see the section of Lock Your Scooter.
- ⑪ Modes: is for walking mode, and its maximum speed is 6 km/h; the taillight will blink red when this mode is enabled. is for standard mode. is for sport mode, and it has high speed in this mode; it is recommended to use this mode after mastering the riding skills.

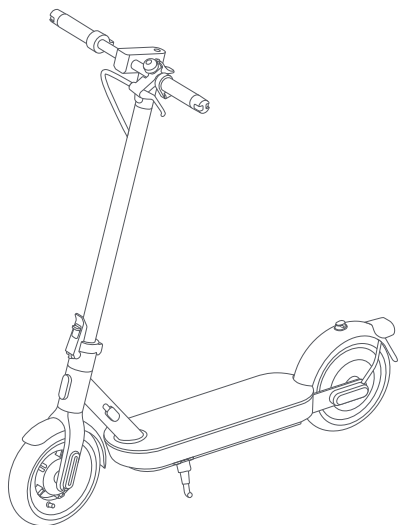

Electric Scooter




User Manual



Important Information




Specifications




Allen Key




Screw × 5 (1 is spare)




Battery Charger

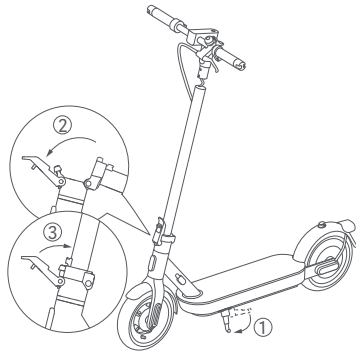

- 1 Put down the kickstand, and hold up the stem until it is completely in an upright position. Then push the quick release lever inward to the end.

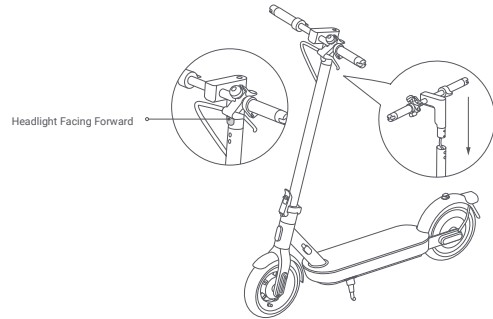


- 2 Install the handlebar onto the stem, and make sure to install the handlebar in the correct direction.

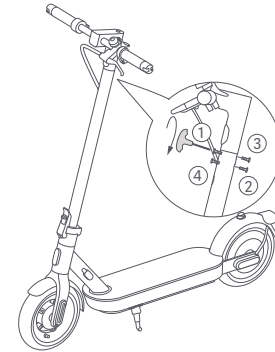


- 3 Follow the number order as illustrated to pre-tighten the four screws with the included Allen key. Make sure the handlebar is correctly installed and then tighten the screws thoroughly.

Charge Your Scooter

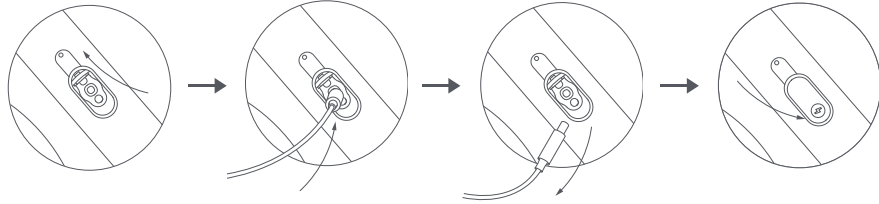


- 1 Lift up the rubber flap.
- 2 Connect the battery charger to the charging port.
- 3 Disconnect the battery charger from the charging port when charging is completed.
- 4 Put back the rubber flap.

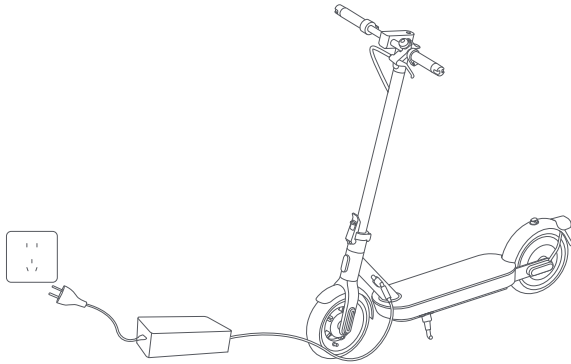


The scooter is fully charged when the LED on the battery charger changes from red to green.




When the scooter is turned off for about a month with the battery level of the scooter being lower than 30%, the scooter will enter sleep mode. In this case, the scooter cannot be turned on. To exit the sleep mode, charge the scooter for about three seconds to activate the battery.

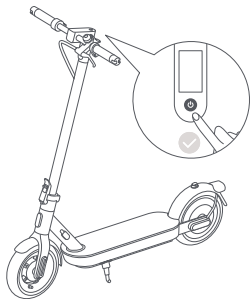


- 1 Before being activated, the scooter will keep beeping when turned on and is limited to 10 km/h. When the scooter is used for the first time, it must be activated via the Mi Home/Xiaomi Home app.

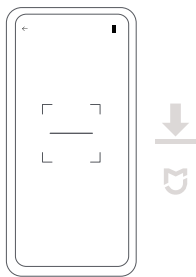


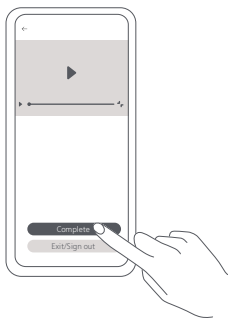
- 2 Scan the QR code on the label attached to the control panel, on the right side of the deck, or on the back cover of the user manual to download the Mi Home/Xiaomi Home app.
Note: The QR code is unique to your scooter, please keep it safe.

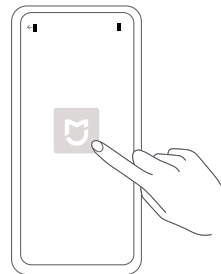


- 3 Open the Mi Home/Xiaomi Home app.

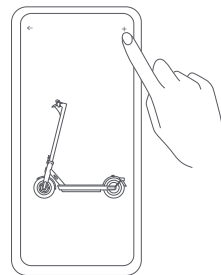

- 4 Tap  on the top right corner and open "Scan" to scan the QR code on the label attached to the control panel, on the right side of the deck, or on the back cover of the user manual again. Then follow the instructions in the app to add the scooter.



- 5 Watch the riding guide video. Do not exit the video before finishing it. Otherwise, the activation will fail.

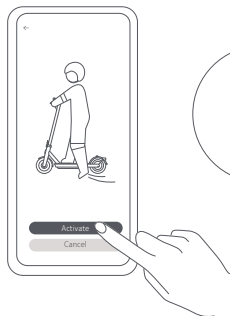

- 6 Tap "Activate" to activate the scooter. Once the scooter is activated, the beeping will stop and the speed restriction will be lifted



Notes:

- The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.
- The version of the app might have been updated, please follow the instructions based on the current app version.

Reset Bluetooth

Make sure the scooter is turned on. Press the accelerator and simultaneously press the power button 5 times to reset. When the scooter beeps, it has been reset successfully.


Restore Factory Settings

Make sure the scooter is turned on. Squeeze the brake lever, and simultaneously press and hold the accelerator and the power button for 7 seconds. When you hear a beep, the scooter has been restored to factory settings. This operation will completely delete the data stored in the scooter, please proceed with caution.

Note: When the scooter is locked or during riding, the factory settings cannot be restored.

How to Ride

1 Before Riding




Wear a helmet, elbow pads and knee pads before riding.

Note: Check the tire pressure before riding. The recommended tire pressure is 45-50 psi.

2 Starting & Accelerating




Step on the deck with one foot, and slowly kicks off the other on the ground.

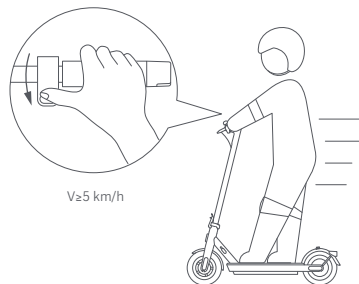


When the scooter starts to coast, put both feet on the deck and gently press the accelerator. The accelerator can be used once the scooter is going over 5 km/h.

3 Steering

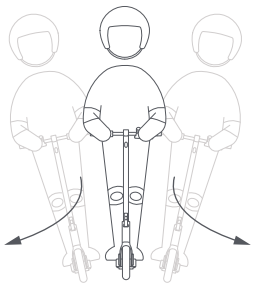


Tilt your body to the steering direction as you turn, and slowly turn the handlebar.

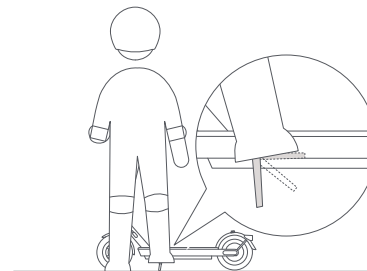

When the scooter slows down or stops, put one foot on the ground to get off the scooter. Put down the kickstand when parking the scooter.

4 Decelerating & Braking & Parking

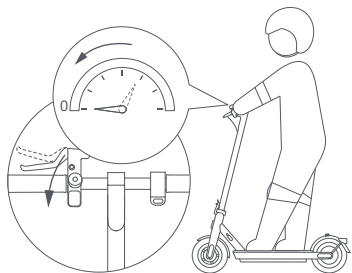


Release the accelerator to slow down, and you can enable the energy recovery function to help reduce the speed. Squeeze the brake firmly to make an emergency stop.




To avoid others using the scooter without your permission, you can lock the scooter when it is parked.


Lock Your Scooter

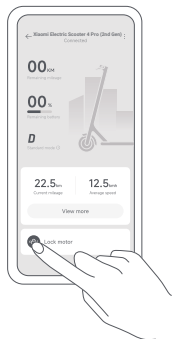


Tap  to lock the motor.

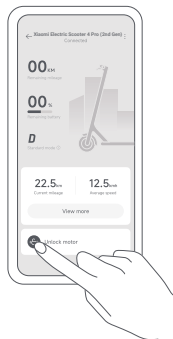


Tap  to unlock the motor.

- When the motor is locked, all the icons on the control panel will automatically go out except the Bluetooth and the motor lock icon. If the scooter goes beyond the Bluetooth connection range, the Bluetooth will be disconnected and the Bluetooth icon will go out.
- Tap , in the app to lock the motor and then the power button will not function. If the scooter is moved forcibly, its rear wheel cannot move normally, accompanied by the buzzer alarm and a vibrating alert on the phone. This function cannot prevent the scooter from being stolen, please keep your scooter safe. The scooter will automatically turn off after the motor has been locked for 24 hours, and the motor will remain locked when the scooter is turned on again. You need to unlock the motor in the app to use the scooter. Locking the motor will consume the scooter's power, please use this function properly. Note: The phone will vibrate only if the page of the scooter in the Mi Home/Xiaomi Home app is open.


Fold/Unfold & Carry

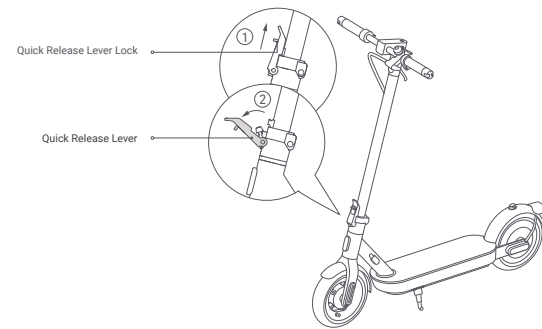


- 1 Make sure the scooter is turned off and not being charged before folding. Hold the stem, lift the quick release lever lock, and pull the quick release lever outward.

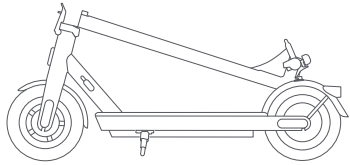


- 2 Fold the stem.

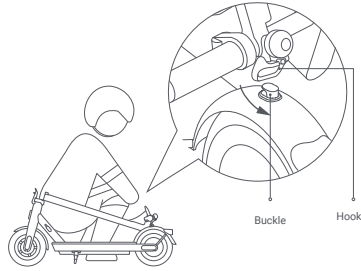

- 3 Align the buckle with the hook and secure them together.

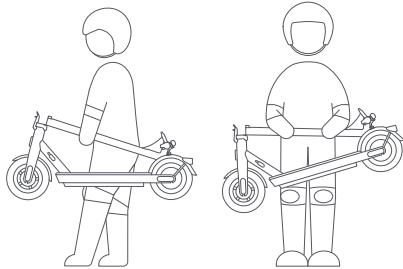


- 4 Hold the stem with either one hand or both hands to carry.

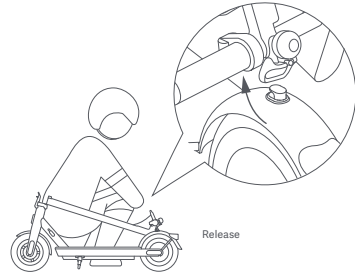

- 5 When unfolding the scooter, pull the buckle upwards to release it from the hook.


Adjust the Mechanical Brake

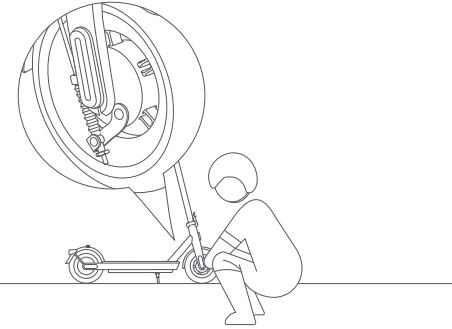


Tool: 14 mm T-handle socket wrench (the tool needs to be prepared by the user).

Before adjustment, make sure the scooter is powered off and not charging. When the brake is too tight, use the tool to turn the nut on the screw rod counterclockwise, so as to slightly shorten the brake cable's exposed bottom part. When the brake is too loose, use the tool to turn the nut on the screw rod clockwise, so as to slightly lengthen the brake cable's exposed bottom part.
Warning: Do not adjust the brake too tightly; otherwise, the front wheel may lock up when braking, resulting in the scooter tipping forward.


Inflate the Tire

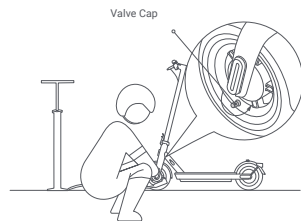

- 1 Remove the tire valve cap, and connect the pump and the valve securely together.

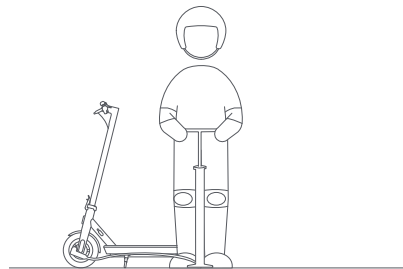

- 2 Inflate the tire.

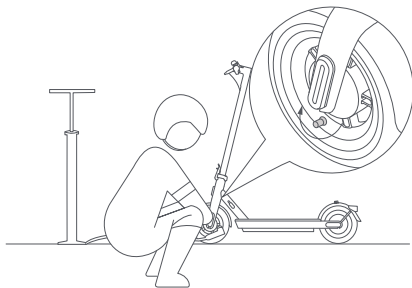

- 3 Remove the pump and install the tire valve cap.



Check the tire pressure every month, and inflate the tires if the pressure is too low. The recommended tire pressure is 45–50 psi.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

For further information, please go to www.mi.com

For detailed e-manual, please go to www.mi.com/global/service/userguide

Importer:

Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

www.beryko.cz

Do Not Remove



Made in China
OriginalInstructions